# MITSUBISHI INDUSTRIAL ROBOT MELFA F Series



Country/Region Sales Office Tel/Fax Mitsubishi Electric Automation Inc. Tel: +1-847-478-2100 U.S.A 500 Corporate Woods Parkway Vernon Hills, IL 60061, USA Fax: +1-847-478-2253 MITSUBISHI ELECTRIC DO BRASIL COMERCIO E SERVICOS LTDA. Tel: +55-11-4689-3000 Brazil Rua Jussara, 1750 - Bloco B- Sala 01, Jardim Santa Cecilia - CEP 06465-070, Fax: +55-11-4689-3016 Barueri - SP, Brasil Germany Mitsubishi Electric Europe B.V. German Branch Tel: +49-2102-486-0 Gothaer Strasse 8 D-40880 Ratingen, Gernany Fax: +49-2102-486-1120 Tel: +44-1707-27-6100 U.K Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, Hatfield, Hertfordshire., AL10 8XB, UK Fax: +44-1707-27-8695 Mitsubishi Electric Europe B.V. Italian Branch Tel: +39-039-60531 Italy VIALE COLLEONI 7-20041 Agrate Brianza(Milano), Italy Fax: +39-039-6053-312 Mitsubishi Electric Europe B.V. Spanish Branch Tel: +34-935-65-3131 Spain Carretera de Rubi 76-80-AC.420, Fax: +34-935-89-2948 E-08190 Sant Cugat del Valles(Barcelona), Spain Mitsubishi Electric Europe B.V. French Branch Tel: +33-1-5568-5568 France 25, Boulevard des Bouvets, F-92741 Nanterre Cedex, France Fax: +33-1-5568-5757 Czech Republic Mitsubishi Electric Europe B.V. Czech Branch Tel: +420-251-551-470 Avenir Business Park, Radicka 714/113a, 158 00 Praha5, Czech Republic Fax: +420-251-551-471 Mitsubishi Electric Europe B.V. Polish Branch Tel: +48-12-630-47-00 Poland ul. Krakowska 50 32-083 Balice, Poland Fax: +48-12-630-47-01 Mitsubishi Electric Europe B.V. Irish Branch Tel: +353-14198800 Ireland Westgate Business Park, Ballymount. IRL-Dublin 24 Fax: +353-14198890 Tel: +7-495-721-2070 Mitsubishi Electric Europe B.V. Russian Branch Moscow Office Russia 52, bld. 3, Kosmodamianskaya nab., RU-115054, Moscow, Russia Fax: +7-495-721-2071 Mitsubishi Electric Automation (CHINA) Ltd. Tel: +86-21-2322-3030 China No.1386 Hongqiao Road, Mitsubishi Electric Automation Center 3F Shanghai, Fax: +86-21-2322-3000 Taiwan Mitsubishi Electric Taiwan Co.,Ltd. Tel: +886-02-2833-5430 10F,No.88,Sec.6,Chung-Shan N.Rd.,Taipei,Taiwan Fax: +886-02-2833-5433 Korea Mitsubishi Electric Automation Korea Co., Ltd. Tel: +82-2-3660-9552 1480-6, Gayang-Dong, Gangseo-Gu Seoul 157-200, Korea Fax: +82-2-3664-8372 Tel: +65-6470-2480 Mitsubishi Electric Asia Pte, Ltd. Singapore 307 Alexandra Road #05-01/02, Mitsubishi Electric Building, Singapore Fax: +65-6476-7439 Tel: +66-2517-1326 Thailand Mitsubishi Electric Automation (Thailanad) Co., Ltd. Bang-Chan Industrial Estate No.111 Soi Serithai 54, Fax: +66-2906-3239 T.Kannayao, A.Kannayao, Bangkok 10230 Thailand Mitsubishi Electric India Pvt. Ltd. Tel: +91-2710-2000 Emerald House, EL-3, J Block, M.I.D.C., Bhosari, Pune, 411026, Fax: +91-2710-2100



NAGOYA WORKS: 1-14, YADA-MINAMI 5, HIGASHI-KU, NAGOYA, JAPAN


This catalog is an introduction to only part of what Mitsubishi Electric has to offer.

Mitsubishi Electric offers individualized solutions for the challenges in your factory.

Maharashtra State, India

When exported from Japan, this manual does not require application to the Ministry of International Trade and Industry for service transaction permission.



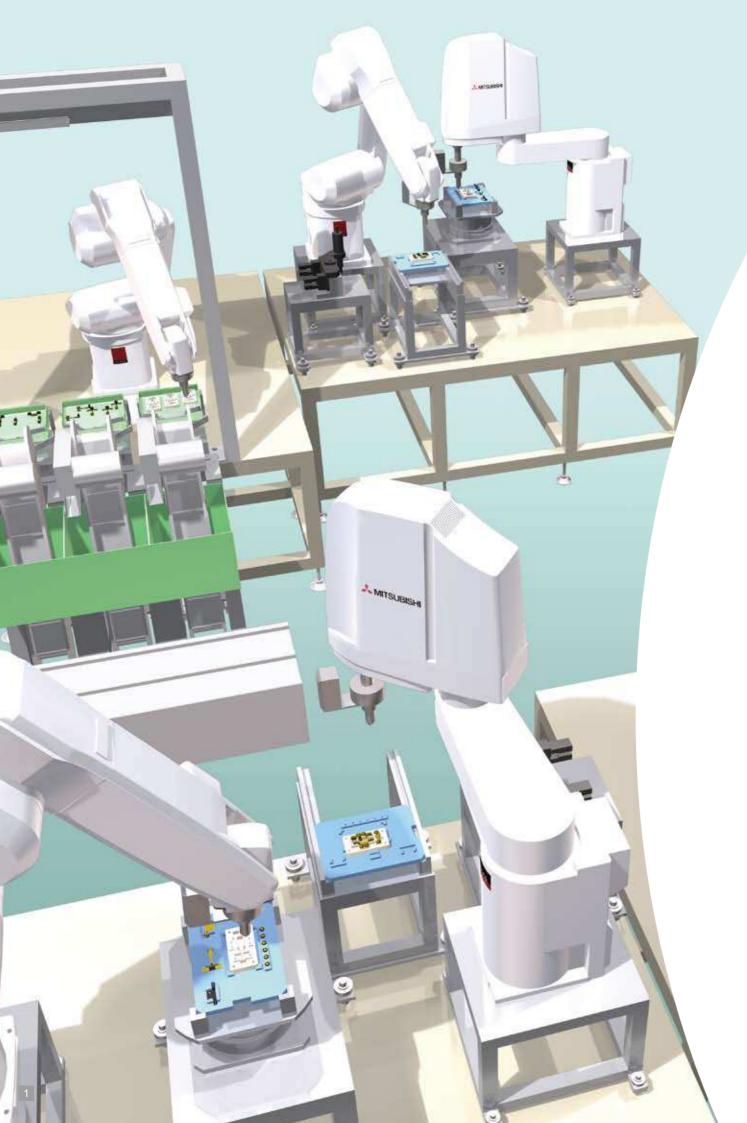

# Features

Mitsubishi Electric's F-Series industrial robots are equipped with technology developed and tested at its own production plants. Equipped with advanced technology and easy-to-use features, these robots are designed to facilitate automation of any production plant.

- Designed for flexible automation
- Compact and powerful
- High reliability

# **Vertical type**

A compact 6-axis jointed robot with an optimal arm length and wider range of movement suited for complex assembly and processing tasks.

Compact body and slim arm design, allowing operating area to be expanded and load capacity increased.

Layout accommodates a wide range of applications from transport of mechanical parts to assembly of electrical parts.

Environmental resistance specifications enable application to a wide range of uses without needing to consider the installation environment.

- Contributes to improved productivity with high-frequency operations
- Prevention of interference with cables
- Compatibility with internal Ethernet cable tools
- Expanded J4 axis operating range

# **Horizontal type**

Matches perfectly to a variety of applications with a wide range of operating areas and variations.

High speed and high accuracy achieved with the highly rigid arm and latest servo control technology.

Suitable for a wide range of fields from mass production of food and pharmaceutical products requiring high-speed operation to assembly operations requiring high precision.

- The fastest high-speed operation in its class
   Compatibility with internal
- Improved speed for vertical movements
- Improved continuous operability
- Enhanced wrist axis
- Internal routing of cables results in simplified cable management

- The fastest high-speed operation in its class Compact installation with operation performed near the robot
  - Changes in operating posture made even more quickly
  - Full use of installation space

Ethernet cable tools

Full use of installation space



# Lineup

# With a wide range of variations from Mitsubishi Electric, co

The Mitsubishi Electric robot product line is equipped with all of the basic performance features desired in a robot, such as being powerful, speedy, and compact.

The variations that Mitsubishi Electric is confident meet the needs of the current era and have pushed Factory Automation forward in a dramatic way.

Vertical, multiple-joint type (RV)



		-								
Туре		RV-2F	RV-4F	RV-4FL	RV-7F	RV-7FL	RV-7FLL	RV-13F	RV-13FL	RV-20F
Maximum load capacity (kg)		3	4	4	7	7	7	13	13	20
Maximum reach	radius (mm)	504	515	649	713	908	1503	1094	1388	1094
Faviranmental	Standard	○(IP30)	○(IP40)	○(IP40)	○(IP40)	○(IP40)	○(IP40)	○ (IP40)	○(IP40)	○(IP40)
Environmental specifications	Oil mist	_	○(IP67)	○(IP67)	○(IP67)	○(IP67)	○(IP67)	○ (IP67)	○(IP67)	○(IP67)
эрсоповиона	Clean	_	○ (ISOclass3)	○ (ISOclass3)	○(ISOclass3)	○ (ISOclass3)	○ (ISOclass3)	○(ISOclass3)	○(ISOclass3)	○(ISOclass3)


Controller







# Electric, committed to ease in selection.

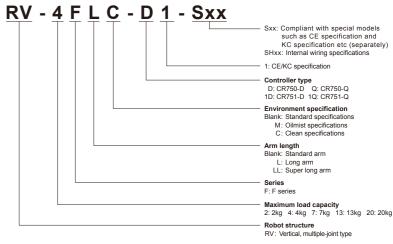

RH - 6 FH 55 20 M - D 1 - Sxx

Sxx: Compliant with special models

SXX. Compinant with special models such as CE specification and KC specification etc (separately) SM: Specification with protection specification controller (with the protection box)
1: CE/KC specification
Controller type D: CR750-D Q: CR750-Q 1D: CR751-D 1Q: CR751-Q
Environment specification Blank: Standard specifications M: Olimist specifications C: Clean specifications
Vertical stroke 12: 120mm 34: 340mm 15: 150mm 35: 350mm 20: 200mm 45: 450mm
Arm length 35: 350mm 70: 700mm 45: 450mm 85: 850mm 55: 550mm 100: 1000mm
Series FH: F series
Maximum load capacity 3: 3kg 6: 6kg 12: 12kg 20: 20kg
Robot structure

Horizontal, multiple-joint type (RH)









	RH-3FH35	RH-3FH45	RH-3FH55	RH-6FH35	RH-6FH45	RH-6FH55	RH-12FH55	RH-12FH70	RH-12FH85	RH-20FH85	RH-20FH100
city (kg)	3	3	3	6	6	6	12	12	12	20	20
ius (mm)	350	450	550	350	450	550	550	700	850	850	1000
Standard		○(IP20)		○ (IP20)			○ (IP20)			○(IP20)	
Oil mist	_			○ (IP65)			○ (IP65)			○ (IP65)	
Clean	○ (ISOclass3)			○ (ISOclass3)			○ (ISOclass3)			○(ISO	class3)
iu S	is (mm) tandard il mist	ity (kg) 3 ss (mm) 350 tandard ill mist	ity (kg) 3 3 s (mm) 350 450 tandard (IP20) ill mist —	ity (kg) 3 3 3 3 3 s (mm) 350 450 550 tandard (IP20) —	ity (kg) 3 3 3 6 s (mm) 350 450 550 350 tandard (IP20)	sity (kg)     3     3     6     6       ss (mm)     350     450     550     350     450       tandard     O (IP20)     O (IP20)     O (IP65)	sity (kg)     3     3     6     6     6       ss (mm)     350     450     550     350     450     550       tendard     O (IP20)     O (IP20)     O (IP65)	sity (kg)     3     3     6     6     6     12       s (mm)     350     450     550     350     450     550     550       tandard     O (IP20)     O (IP20)     O (IP65)	sity (kg)     3     3     6     6     6     12     12       s (mm)     350     450     550     350     450     550     550     700       tendard     O (IP20)     O (IP20)     O (IP20)     O (IP65)     O (IP65)	sity (kg)     3     3     6     6     6     12     12     12       s (mm)     350     450     550     350     450     550     550     700     850       tendard     O (IP20)     O (IP20)     O (IP20)     O (IP65)     O (IP65)	sity (kg)         3         3         3         6         6         6         12         12         12         12         20           ss (mm)         350         450         550         350         450         550         550         700         850         850           tended         O(IP20)         O(IP20)         O(IP20)         O(IP65)         O(IP65)         O(IP65)         O(IP65)

Controller CR75










**RV-2F** 

2kg

### **External Dimensions/Operating Range Diagram**

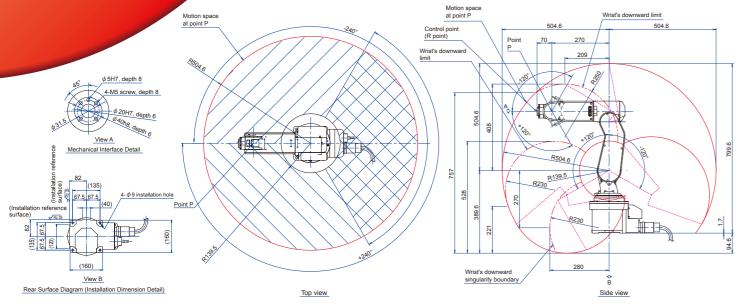

### **Specifications**


Туре		Unit	RV-2F(B)				
Environmental specifications			Standard				
Protection degree			IP30				
Installation			Floor type, ceiling type, (wall-mounted type *2)				
Structure			Vertical, multiple-joint type				
Degrees of freedom			6				
Drive system *1			AC servo motor (J2, J3 and J5: with brake)				
Position detection method			Absolute encoder				
Maximum load capacity		kg	maximum 3 (Rated 2) *5				
Arm length	NO1 arm	mm	230 + 270				
Maximum reach radius	<u>'</u>	mm	504				
	J1		480 (±240)				
	J2		240 (-120 to +120)				
	J3	1 .	160 (-0 to +160)				
Operating range	J4	deg	400 (±200)				
	J5	1	240 (-120 to +120)				
	J6		720 (-360 to +360)				
	J1	deg/sec	300				
	J2		150				
	J3		300				
Maximum speed	J4		450				
	J5		450				
	J6		720				
Maximum composite speed *3	'	mm/sec	4955				
Cycle time *4		sec	0.6				
Position repeatability		mm	±0.02				
Ambient temperature		°C	0 to 40				
Mass		kg	19				
	J4		4.17				
Tolerable moment	J5	Nm	4.17				
	J6		2.45				
	J4		0.18				
Tolerable amount of inertia	J5	kgm²	0.18				
	J6	1	0.04				
Tool wiring			Hand: 4 input points/4 output points Signal cable for the multi-function hand				
Tool pneumatic pipes			φ4×4				
Machine cable			5m (connector on both ends)				
Connected controller			CR750, CR751 (CR750: Japan, Europe, U.S.; CR751: Asia)				
A4. The extended over delight or each become be	color on the 14 14	and IO and a Three	and an available with hydron included for all area (DV 2FD)				

- \*1: The standard model does not have a brake on the J1, J4, or J6 axis. There are models available with brakes included for all axes. (RV-2FB)
- 2: The wall-mounted specification is a custom specification where the operating range of the JT-axis is limited.

  3: This is the value at the surface of the mechanical interface when all axes are composited.

  4: The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 1 kg.

  5: The maximum load capacity indicates the maximum payload when the mechanical interface is facing downward (±10° to the perpendicular).

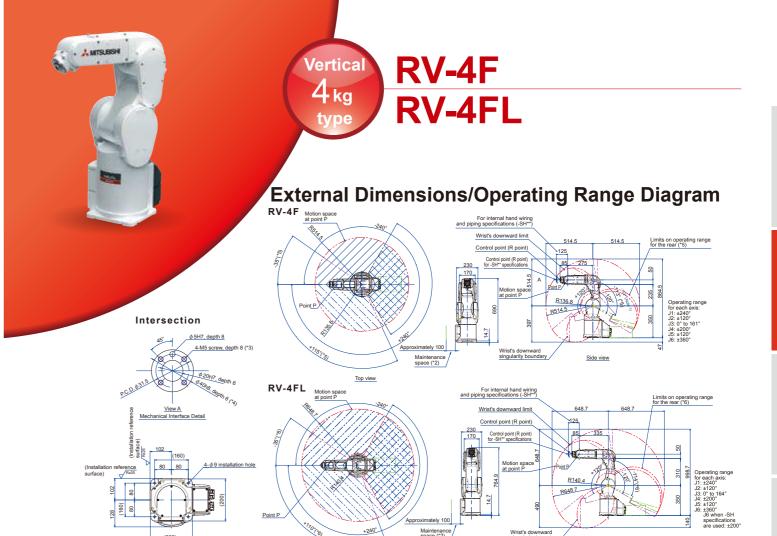

Rear Surface Diagram (Installat  Specification		-	Note  Top view  1. Make sure to leave enough space open for cable connections between devices.  2. Make sure to leave enough space open for removing and attaching covers during maintenance work.  3. Specify a thread engagement length of 7.5 to 5 monthlest models and 6 mm for Standard.  5. The operating range for the J2 axis when -35° s 11 s +110° is limited to -113° s 12 s +120°.  7. The operating range for the J2 axis when -35° s 11 s +110° is limited to -114° s 12 s +120°.  7. The posture shown in the diagram results from when the robot axis angles are set as listed.  J1 = 0°, J2 = 0°, J3 = 0°, J4 = 0°, J5 = 0°, J6				
Туре			RV-4F(M)(C)	RV-4FL(M)(C)			
Environmental specifications			Standard/	Oil mist/ Clean			
Protection degree			IP40 (standard)/ IP67 (oil mist) *1/ ISOclass3 *7				
Installation			Floor type, ceiling type, (wall-mounted type *2)				
Structure				ultiple-joint type			
Degrees of freedom				6			
Drive system *1			AC se	ervo motor			
Position detection method			Absolu	ite encoder			
Maximum load capacity		kg		4			
Arm length	NO1 arm	mm	240 + 270	245 + 300			
Maximum reach radius		mm	515	649			
	J1		480	0 (±240)			
	J2		240 (-1	20 to +120)			
Operating range	J3	deg	161 (-0 to +161)	164 (-0 to +164)			
Operating range	J4	deg	400	) (±200)			
	J5		240 (-1	20 to +120)			
	J6		720	) (±360)			
	J1		450	420			
	J2		450	336			
Maximum speed	J3	deg/sec	300	250			
талтат сросс	J4	- augrees	540	540			
	J5	_	623	623			
	J6		720	720			
Maximum composite speed *3		mm/sec	9027	9048			
Cycle time *4		sec	0.36	0.36			
Position repeatability		mm		±0.02			
Ambient temperature		°C		to 40			
Mass	1.4	kg	39	41			
Tolerable moment	J4	Nm	6.66				
Tolerable moment	J5 J6	INIII	6.66 3.96				
	J6 J4			0.2			
Tolerable amount of inertia	J5	kgm²		0.2			
Tolerable amount of mertia	J6	Kgiii		0.1			
Tool wiring			U.1  Hand: 8 input points/8 output points  Signal cable for the multi-function hand and sensors  LAN X 1 <100 BASE-TX> (8-pin)) *5				
Tool pneumatic pipes			Primary: φ6 x 2 Secondary: φ4 x	8, $\phi$ 4 x 4 (from base portion to forearm)			
Machine cable			5m (connect	or on both ends)			
Connected controller *6			CR750, CR751 (CR750: Japan, Europe, U.S.; CR751: Asia)				

- \*1: Please contact Mitsubishi Electric dealer since the environmental resistance may not be secured depending on the characteristics of oil you use. Air will need to be purged from the lines. For details, refer to the specifications sheet.

  \*2: The wall-mounted specification is a custom specification where the operating range of the J1-axis is limited.


  \*3: This is the value at the surface of the mechanical interface when all axes are composited.

  \*4: The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 1 kg.

- 4. The Cycle time is based on back-and-out invenient over a ventual distance of 25 min and investigation and investigation of the control of t

**RV-7F RV-7FL** 

### **External Dimensions/Operating Range Diagram**

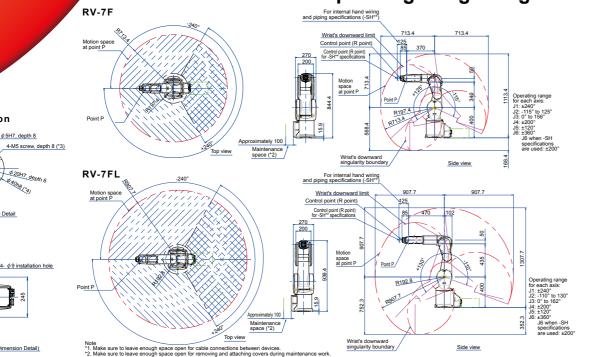

#### **Specifications**

Intersection

Туре		Unit	RV-7F(M)(C)	RV-7FL(M)(C)				
Machine class			Standard/ Oil n	nist/ Clean				
Protection degree			IP40 (standard)/ IP67 (oil mist) *1/ ISOclass3 *7					
Installation			Floor type, ceiling type, (wall-mounted type *2)					
Structure			Vertical, multiple-joint type					
Degrees of freedom			6					
Drive system			AC servo motor					
Position detection method			Absolute et	ncoder				
Maximum load capacity		kg	7					
Arm length	NO1 arm	mm	340 + 370	435 + 470				
Maximum reach radius		mm	713	908				
	J1		480 (±2	•				
	J2		240 (-115 to +125)	240 (-110 to +130)				
Operating range	J3	deg	156 (-0 to +156)	162 (-0 to +162)				
Operating range	J4	uey	400 (±200)					
	J5		240 (-120 to +120)					
	J6		720 (±3	•				
	J1	deg/sec	360	288				
	J2		401	321				
Maximum speed	J3		450	360				
waxiiiuiii speed	J4		337	337				
	J5		450	450				
	J6		720	720				
Maximum composite speed *3		mm/sec	11064	10977				
Cycle time *4		sec	0.32	0.35				
Position repeatability		mm	±0.02					
Ambient temperature		°C	0 to 4	0				
Mass		kg	65	67				
	J4		16.2					
Tolerable moment	J5	Nm	16.2					
	J6		6.86					
	J4		0.45					
Tolerable amount of inertia	J5	kgm <sup>2</sup>	0.45					
	J6		0.10					
Tool wiring			Hand: 8 input points/8 outp Serial signal cable for parallel I/ LAN X 1 <100 BASE	ut points (20 pins total) O (2-pin + 2-pin power line) -TX> (8-pin)) *5				
Tool pneumatic pipes			Primary: φ6 x 2 Secondary: φ4 x 8, ¢	4 x 4 (from base portion to forearm)				
Machine cable			5m (connector on both ends)					
Connected controller			CR750, C	R751				

- T: Please controller

  1: Please contact Misubish Electric dealer since the environmental resistance may not be secured depending on the characteristics of oil you use. Air will need to be purged from the lines. For details, refer to the specifications sheet.

  12: The wall-mounted specification is a custom specification where the operating range of the J1-axis is limited.


  13: This is at the hand flange surface when all axes are composited.

  14: The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 1 kg.

  15: Can also be used as a spare line (0.2 sq. mm, 4-pair cable) for conventional models.

  16: Select effect controller according to your application.

  17: Preservation of cleanliness levels depends on conditions of a downstream flow of 0.3 m/s in the clean room and internal robot suctioning. A q8-mm coupler for suctioning is provided at the back of the base.

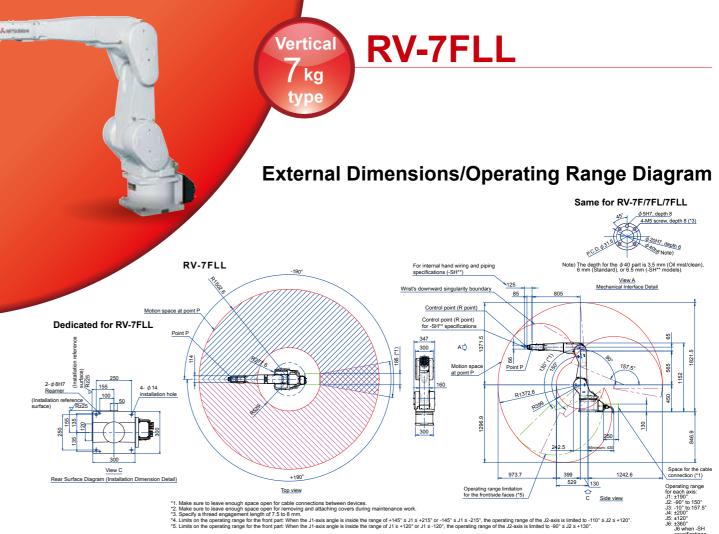

Туре		Unit	RV-7FLL(M)(C)				
Machine class			Standard/ Oil mist/ Clean				
Protection degree			IP40 (standard)/ IP67 (oil mist) *1/ ISOclass3 *7				
Installation			Floor type, ceiling type, (wall-mounted type *2)				
Structure			Vertical, multiple⊣joint type				
Degrees of freedom			6				
Drive system			AC servo motor				
Position detection method			Absolute encoder				
Maximum load capacity		kg	Maximum: 7 (Rated: 7)				
Arm length	NO1 arm	mm	565 + 805				
Maximum reach radius		mm	1503				
	J1		380 (±190)				
	J2	1	240 (-90 to +150)				
• "	J3	1 .	167.5 (-10 to +157.5)				
Operating range	J4	deg	400 (±200)				
	J5		240 (-120 to +120)				
	J6		720 (±360)				
	J1	deg/sec	234				
	J2		164				
	J3		219				
Maximum speed	J4		375				
	J5		450				
	J6		720				
Maximum composite speed *3		mm/sec	15300				
Cycle time *4		sec	0.63				
Position repeatability		mm	±0.06				
Ambient temperature		°C	0 to 40				
Mass		kg	130				
	J4		16.2				
Tolerable moment	J5	Nm	16.2				
	J6		6.86				
	J4		0.45				
Tolerable amount of inertia	J5	kgm²	0.45				
	J6		0.10				
Tool wiring			Hand: 8 input points/8 output points (20 pins total) Serial signal cable for parallel I/O (2-pin + 2-pin power line) LAN X 1 <100 BASE-TX> (8-pin)) *5				
Tool pneumatic pipes			Primary: $\phi$ 6 x 2 Secondary: $\phi$ 6 x 8, $\phi$ 4 x 4 (With wrist attached)				
Machine cable			7m (connector on both ends)				
Connected controller			CR750, CR751				

- \*\*I Please controller\*\*

  \*\*I Please controller\*\*

  \*\*I Please controller\*\*

  \*\*I Please contact Mitsubishi Electric dealer since the environmental resistance may not be secured depending on the characteristics of oil you use.

  \*\*I Please contact Mitsubishi Electric dealer since the environmental resistance may not be secured depending on the characteristics of oil you use.

  \*\*I The wall-mounted specification is a custom specification where the operating range of the J1-axis is limited.

  \*\*I The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 1 kg.

  \*\*I The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 1 kg.

  \*\*I The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 1 kg.

  \*\*I The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 1 kg.

  \*\*I The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 1 kg.

  \*\*I The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 1 kg.

  \*\*I The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 1 kg.

  \*\*I The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 1 kg.

  \*\*I The cycle time is based on back-and-forth movement over a vertical distance of 300 mm when the load is 1 kg.


  \*\*I The cycle time is based on back-and-forth movement over a vertical distance of 300 mm when the load is 1 kg.

  \*\*I The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 1 kg.

  \*\*I T

**RV-13F** 13kgRV-13FL

### **External Dimensions/Operating Range Diagram**

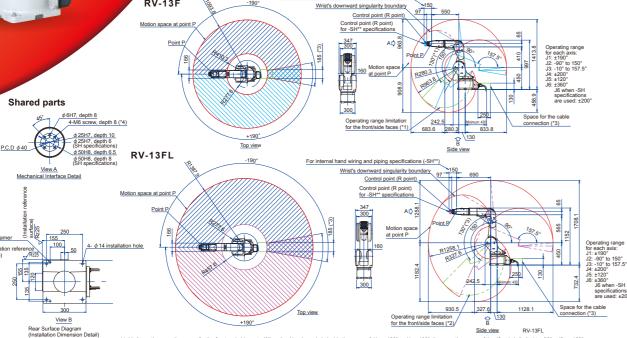

11: Limits on the operating range for the front and side parts: When the J1-axis angle is inside the range of J1 ≥ +120° or J1 ≤ -130°, the operating range of the J2-axis is limited to +90° ≤ J2 ≤ +130° \*22. Limits on the operating range for the front part. When the J1-axis angle is inside the range of J1 ≥ +130° or J1 ≤ -140°, the operating range of the J2-axis is limited to +90° ≤ J2 ≤ +130°.

33. Make sure to leave enough space open for cable connections between devices.

44. Specify a thread engagement length of 10 to 9 mm.

**Specifications** 

Туре		Unit	RV-13F(M)(C)	RV-13FL(M)(C)			
Machine class			Standard/ Oil mist/ Clean				
Protection degree			IP40 (standard)/ IP67 (oil mist) *1/ ISOclass3 *7				
Installation	Installation		Floor type, ceiling type, (wall-mounted type *2)				
Structure			Vertical, multiple-joint type				
Degrees of freedom			6				
Drive system			AC servo motor				
Position detection method			Absolute	encoder			
Maximum load capacity		kg	Maximum: 13 (	Rated: 12) *8			
Arm length	NO1 arm	mm	410 + 550	565 + 690			
Maximum reach radius		mm	1094	1388			
	J1		380(±	190)			
	J2		240 (-90	to +150)			
Operating range	J3	doa	167.5 (-10	to +157.5)			
Operating range	J4	deg	400 (±	200)			
	J5		240 (-120 to +120)				
	J6		720 (±360)				
	J1	deg/sec	290	234			
	J2		234	164			
	J3		312	219			
Maximum speed	J4		375	375			
	J5		375	375			
	J6		720	720			
Maximum composite speed *3		mm/sec	10450	9700			
Cycle time *4		sec	0.53	0.68			
Position repeatability		mm	±0.	05			
Ambient temperature		°C	0 to	40			
Mass		kg	120	130			
	J4		19	3			
Tolerable moment	J5	Nm	19.3				
	J6		11				
	J4		0.4	7			
Tolerable amount of inertia	J5	kgm²	0.4	7			
	J6		0.1	4			
Tool wiring			Hand: 8 input points/8 output points (20 pins total)  Serial signal cable for parallel I/O (2-pin + 2-pin power line)  LAN X 1 <100 BASE-TX> (8-pin))*5				
Tool pneumatic pipes			Primary: φ6 x 2 Secondary: φ6	x 8, $\phi$ 4 x 4 (With wrist attached)			
Machine cable			7m (connector on both ends)				
Connected controller			CR750, CR751				
*1: Please contact Mitsubishi Electric deal	er since the envir	onmental resistar	nce may not be secured depending on the characteristics of oil you use.				

- \*1: Please contact Misubishi Electric dealer since the environmental resistance may not be secured depending on the characteristics of oil you use.

  \*2: The wall-mounted specification is a custom specification where the operating range of the J1-axis is limited.

  \*3: This is the value at the surface of the mechanical interface when all axes are composited.


  \*4: The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 5 kg.

  \*5: Can also be used as a spare line (0.13 sq. mm. 4-pair cable) for conventional models. Provided up to the inside of the forearm.

  \*6: Select either controller according to your application.

  \*7: Preservation of cleanliness levels depends on conditions of a downstream flow of 0.3 m/s in the clean room and internal robot suctioning. A q8-mm coupler for suctioning is provided at the back of the base.

  \*8: The maximum load capacity indicates the maximum payload when the mechanical interface is facing downward (±10° to the perpendicular).

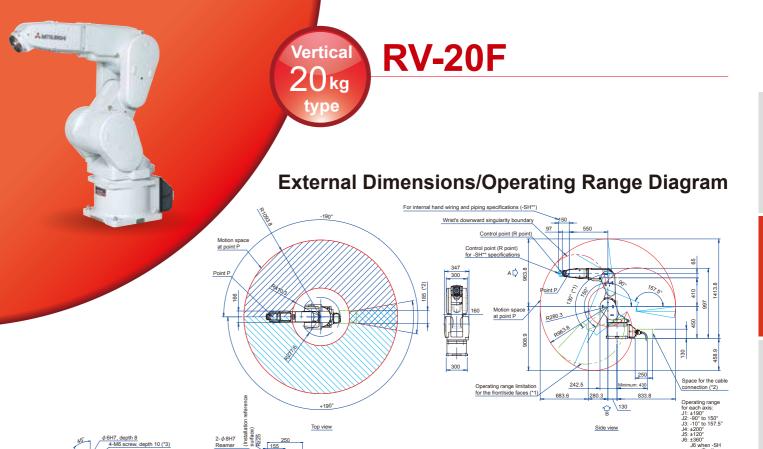

\*1: Limits on the operating range for the front and side parts: When the J1-axis angle is inside the range of J1 ≥ +120° or J1 ≤ -130°, the operating range of the J2-axis is limited to -90° ≤ J2 ≤ +130°.

\*2. Make sure to leave enough space open for cable connections between devices.

\*3. Specify a thread engagement length of 10 to 9 mm. View B

Specifications

Туре		Unit	RV-20F(M)(C)				
Machine class			Standard/ Oil mist/ Clean				
Protection degree			IP40 (standard)/ IP67 (oil mist) *1/ ISOclass3 *7				
Installation			Floor type, ceiling type, (wall-mounted type *2)				
Structure			Vertical, multiple-joint type				
Degrees of freedom			6				
Drive system			AC servo motor				
Position detection method			Absolute encoder				
Maximum load capacity		kg	Maximum: 20 (Rated: 15) *8				
Arm length	NO1 arm	mm	410 + 550				
Maximum reach radius		mm	1094				
	J1		380 (±190)				
	J2		240 (-90 to +150)				
	J3		167.5 (-10 to +157.5)				
Operating range	J4	deg	400 (±200)				
	J5		240 (-120 to +120)				
	J6	_	720 (±360)				
	J1		110				
	J2		110				
	J3		110				
Maximum speed	J4	deg/sec -	124				
	J5		125				
	J6	_	360				
Maximum composite speed *3		mm/sec	4200				
Cycle time *4		sec	0.70				
Position repeatability		mm	±0.05				
Ambient temperature		°C	0 to 40				
Mass		kg	120				
	J4		49.0				
Tolerable moment	J5	Nm	49.0				
	J6	<u> </u>	11				
	J4		1.40				
Tolerable amount of inertia	J5	kgm²	1.40				
Tolorable amount of moraa	J6	_	0.14				
Tool wiring			Hand: 8 input points/8 output points (20 pins total) Serial signal cable for parallel I/O (2-pin + 2-pin power line) LAN X 1 <100 BASE-TX> (8-pin)) *5				
Tool pneumatic pipes			Primary: $\phi$ 6 x 2 Secondary: $\phi$ 6 x 8, $\phi$ 4 x 4 (With wrist attached)				
Machine cable			7m (connector on both ends)				
Connected controller			CR750, CR751				

Rear Surface Diagram (Installation Dimension Detail)

- \*\*I: Please contact Mitsubishi Electric dealer since the environmental resistance may not be secured depending on the characteristics of oil you use.

  \*\*2: The wall-mounted specification is a custom specification where the operating range of the J1-axis is limited.

  \*\*3: This is the value at the surface of the mechanical interface when all axes are composited.

  \*\*4: The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm when the load is 5 kg.

  \*\*5: Can also be used as a spare line (0.13 sg. mm, 4-pair cable) for conventional models. Provided up to the inside of the forearm.

  \*\*6: Select either controller according to your application.


  \*\*7: Preservation of cleanliness levels depends on conditions of a downstream flow of 0.3 m/s in the clean room and internal robot suctioning. A  $\varphi$ 8-mm coupler for suctioning is provided at the back of the base.

  \*\*8: The maximum load capacity indicates the maximum payload when the mechanical interface is facing downward (±10° to the perpendicular).

**RH-3FH35 Horizontal RH-3FH45 RH-3FH55** 

3kg

**External Dimensions/Operating Range Diagram** 

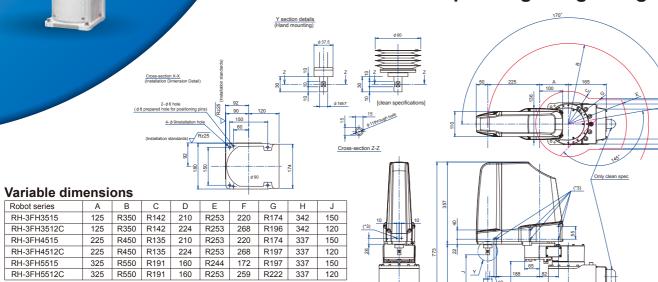

- \*1: Space required for the battery replacement
- \*2: Space required for the interconnection cable
  \*3: Screw holes (M4, 6 mm long) for affixing user wiring and piping. (6 locations on both sides and 2 locations on the front of the No. 2 arm.)


# **Specifications**

Robot series

RH-3FH3512C RH-3FH4515

RH-3FH4512C RH-3FH5515

Туре		Unit	RH-3FH3515/12C	RH-3FH4515/12C	RH-3FH5515/12C			
Machine class			Standard/ Clean					
Protection degree *1			IP20/ ISOclass3 *6					
Installation			Floor type					
Structure				Horizontal, multiple-joint type				
Degrees of freedom				4				
Drive system				AC servo motor				
Position detection method				Absolute encoder				
Maximum load capacity		kg		Maximum 3 (rating 1)				
Arm length	NO1 arm	mm	125	225	325			
Aill lengur	NO2 arm			225				
Maximum reach radius		mm	350	450	550			
	J1	deg		340 (±170)				
Operating range	J2	deg						
Operating range	J3 (Z)	mm	150 (Clean specification : 120) *1					
	J4 (θ)	deg	720 (±360)					
	J1	deg/sec	420					
Maximum speed	J2	uogrooo	720					
талтат ороса	J3 (Z)	mm/sec	1100					
	J4 (θ)	deg/sec	3000					
Maximum composite speed *2		mm/sec	6800 7500		8300			
Cycle time *3			0.41	0.46	0.51			
	Y-X composite	mm	±0.010	±0.010	±0.012			
Position repeatability	J3 (Z)		±0.01					
	J4 (θ)	deg	±0.004					
Ambient temperature				0 to 40				
Mass		kg	29	29	32			
Tolerable amount of inertia	Rating	kgm²		0.005				
. Olorable amount of morta	Maximum	KgIII		0.06				
Tool wiring			Hand: 8 input points/8 output points (20 pins total) Serial signal cable for parallel I/O (2-pin + 2-pin power line) LAN X 1 <100 BASE-TX> (8-pin)) *4					
Tool pneumatic pipes			Primary: φ6 x 2 Secondary: φ4 x 8					
Machine cable			5m (connector on both ends)					
Connected controller *5				CR750, CR751				

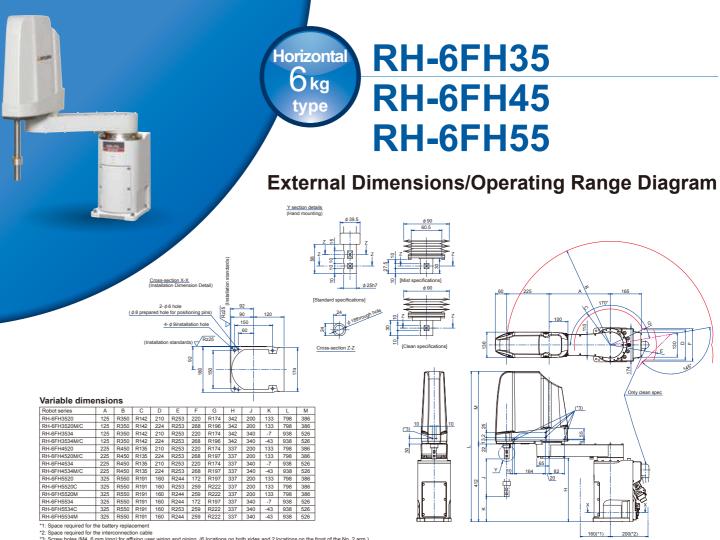

Туре		Unit	RH-6FH35XX/M/C	RH-6FH45XX/M/C	RH-6FH55XX/M/C			
Machine class			Standard/ oil mist/ Clean					
Protection degree *1			IP20 *6/ IP65 *7/ ISO3 *8					
nstallation				Floor type				
tructure				Horizontal, multiple-joint type				
egrees of freedom				4				
rive system				AC servo motor				
osition detection method				Absolute encoder				
aximum load capacity		kg		Maximum 6 (rating 3)				
rm length	NO1 arm	mm	125	225	325			
ili leligui	NO2 arm			225				
laximum reach radius		mm	350	450	550			
	J1	deg		340 (±170)				
norating range	J2	deg	290 (±145)					
perating range	J3 (Z)	mm	xx = 20 : 200/ xx = 34 : 340					
	J4 (θ)	deg	720 (±360)					
	J1	deg/sec	400					
faximum speed	J2	deg/sec	670					
axiiiuiii speeu	J3 (Z)	mm/sec	2400					
	J4 (θ)	deg/sec	2500					
aximum composite speed *2		mm/sec	6900 7600 830		8300			
ycle time *3			0.29					
·	Y-X composite	mm	±0.010	±0.010	±0.012			
sition repeatability	J3 (Z)		±0.01					
	J4 (θ)	deg		±0.004				
mbient temperature				0 to 40				
ass		kg	36	36	37			
olerable amount of inertia	Rating	kgm²		0.01				
relable amount of mertia	Maximum	кдт	0.12					
ool wiring			Hand: 8 input points/8 output points (20 pins total) Serial signal cable for parallel I/O (2-pin + 2-pin power line) LAN X 1 <100 BASE-TX> (8-pin)) *4					
Tool pneumatic pipes			Primary: φ6 x 2 Secondary: φ4 x 8					
Machine cable			5m (connector on both ends)					
Connected controller *5			CR750, CR751					

<sup>\*1:</sup> The range for vertical movement listed in the environmental resistance specifications (C: Clean specifications) for the RH-3FH is narrower than for the standard model. Keep this in mind when working with the RH-3FH. The environment-resistant specifications are factory-set custom specifications.

\*2: The value assumes composition of 11, 12, and 14.

\*3: Value for a maximum load capacity of 2 kg. The cycle time may increase if specific requirements apply such as high work positioning accuracy, or depending on the operating position. (The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm.)

\*4: Can also be used as a spare line (0.2 sq. mm, 4-pair cable) for conventional models.

\*5: Select either controller according to your application.

\*6: Preservation of cleanliness levels depends on conditions of a downstream flow of 0.3 m/s in the clean room and internal robot suctioning. A ø8-mm coupler for suctioning is provided at the back of the base.

<sup>\*1:</sup> The range of vertical movement listed in the environmental resistance specifications (M: Oil mist specifications, C: Cleanroom specifications) for the RH-6FH is factory-set custom specifications.

\*2: The value assumes composition of J1, J2, and J4.

\*3: Value for a maximum load capacity of 2 kg. The cycle time may increase if specific requirements apply such as high work positioning accuracy, or depending on the operating position. (The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm.)

\*4: Can also be used as a spare line (0.2 sq. mm, 4-pair cable) for conventional models.

\*5: Select either controller according to your application. Note that controllers with oil mist specifications come equipped with a controller protection box (CR750-MB) and "-SM" is appended at the end of the robot model name. If you require it, consult with the Mitsubishi Electric dealer.

require it, Consult with the missubset Lecture 3-000.

\*6: IPS4 rating for European models.

\*7: Please contact Mitsubishi Electric dealer since the environmental resistance may not be secured depending on the characteristics of oil you use. Direct jet to the bellows is excluded.


\*8: Preservation of cleanliness levels depends on conditions of a downstream flow of 0.3 m/s in the clean room and internal robot suctioning. A \$\phi 8\$-mm coupler for suctioning is provided at the back of the base.

# RH-12FH55 RH-20FH85

RH-12FH70 RH-20FH100 **RH-12FH85** 

### **External Dimensions/Operating Range Diagram**

2/20kg

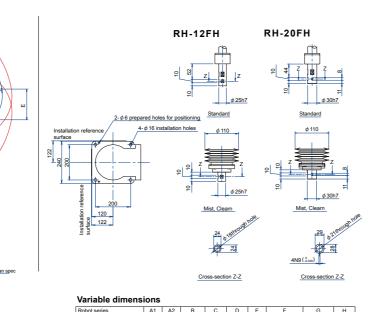

### **Specifications**

Туре		Unit	RH-12FH55XX/M/C	RH-12FH70XX/M/C	RH-12FH85XX/M/C	RH-20FH85XX/M/C	RH-20FH100XX/M/C		
Machine class			Standard/ oil mist/ Clean		Standard/ of	il mist/ Clean			
Protection degree *1				IP20/ IP65 *6/ ISO3 *7	IP20/ IP65	*6/ ISO3 *7			
Installation				Floor type		Floo	r type		
Structure				Į.	Horizontal, multiple-joint type	)			
Degrees of freedom			4						
Drive system					AC servo motor				
Position detection method					Absolute encoder				
Maximum load capacity		kg		Maximum 12 (rating 3)		Maximum 2	20 (rating 5)		
Arm length	NO1 arm	mm	225	375	525	525	525		
Anniengui	NO2 arm			325		325	475		
Maximum reach radius		mm	550	700	850	850	1000		
	J1	deg	340 (±170)			340 (	(±170)		
Operating range	J2	ueg	290 (	±145)	306 (±153)	306 (±153)			
Operating range	J3 (Z)	mm		xx = 35 : 350/ xx = 45 : 450		xx = 35 : 350/ xx = 45 : 450			
	J4 (θ)	deg		720 (±360)	720 (±360)				
	J1	deg/sec	4:	20	280	280			
Maximum speed	J2	degraec		450		4	50		
Waximum speed	J3 (Z)	mm/sec	2800			24	100		
	J4 (θ)	deg/sec		2400	1700				
Maximum composite speed *2		mm/sec	11435	12535	11350	11372	13283		
Cycle time *3			0.30	0.30	0.30	0.30	0.36		
	Y-X composite	mm	±0.012	±0.015	±0.015	±0.015	±0.02		
Position repeatability	J3 (Z)			±0.01		±0.01			
	J4 (θ)	deg		±0.005		±0.005			
Ambient temperature					0 to 40				
Mass		kg	65	67	69	75	77		
Tolerable amount of inertia	Rating	1 2		0.025			065		
Tolerable amount of menta	Maximum	kgm <sup>2</sup>		0.3		1.	05		
Tool wiring				Serial signal ca	put points/8 output points (20 ble for parallel I/O (2-pin + 2 I X 1 <100 BASE-TX> (8-pin	-pin power line)			
Tool pneumatic pipes				Prima	ary: φ6 x 2 Secondary: φ	6 x 8			
Machine cable			5m (connector on both ends)						
Connected controller *5					CR750, CR751				

- \*1: The environment-resistant specifications (C: Clean specification, M: Mist specification) are factory-set custom specifications.

  \*2: The value assumes composition of J1, J2, and J4.

  \*3: Value for a maximum load capacity of 2 kg. The cycle time may increase if specific requirements apply such as high work positioning accuracy, or depending on the operating position. (The cycle time is based on back-and-forth movement over a vertical distance of 25 mm and horizontal distance of 300 mm.)

  \*4: Can also be used as a spare line (0.2 sq. mm, 4-pair cable) for conventional models.


  \*5: Select either controller according to your application. Note that controllers with oil mist specifications come equipped with a controller protection box (CR750-MB) and "-SM" is appended at the end of the robot model name. If you require it, consult with the Mistubishi Electric dealer.

  \*6: Please contact Missubishi Electric dealer since the environmental resistance may not be secured depending on the characteristics of oil you use. Direct jet to the bellows is excluded.


  \*7: Preservation of cleanliness levels depends on conditions of a downstream flow of 0.3 m/s in the clean room and internal robot suctioning. A \$\phi 8-mm coupler for suctioning is provided at the back of the base.

### Controller

### **FQ** series

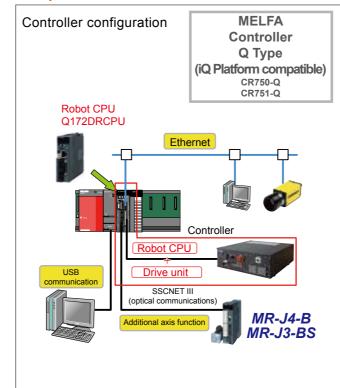

### **FD** series

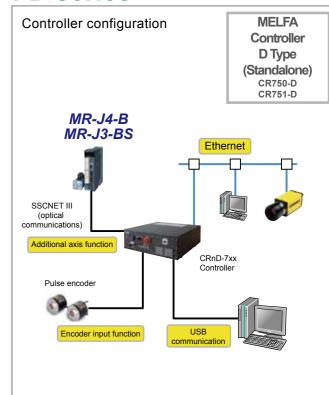

	Туре	Unit	CR750-Q CR750-D	CR751-Q CR751-D					
Robot CPU			FQ Q172	DRCPU					
Path control m	ethod		PTP control and CP control						
Number of axe	es controlled		Maximun	n 6 axes					
Robot languag	e		MELFA-BA	ASIC IV/V					
Position teachi	ing method		Teaching metho	od, MDI method					
Memory -	Number of teaching points	points	<b>13,000</b> / <b>39,000</b>						
capacity	Number of steps	step	FQ 26,000 /	FD 78,000					
	Number of programs	Unit	<b>FQ</b> 256 /	FD 512					
	General-purpose I/O		8192 input points/8192 output points with the multiple CPU common	device / FD 0 input/0 output (Up to 256/256 when options are used)					
	Dedicated I/O		Assigned to multiple CPU common device	ce. / D Assigned to general-purpose I/O.					
	Hand open/close		8 input /	8 output					
	Emergency stop input		1 (redu	indant)					
External input/output	Door switch input	points	1 (redu	indant)					
	Enabling device input	politis	1 (redu	indant)					
E	Emergency stop output		1 (redu	indant)					
	Mode output		1 (redu	indant)					
	Robot error output		1 (redu	indant)					
	Synchronization of additional axes		1 (redu	indant)					
	RS-422		1 (Teaching penda	ant: dedicated T/B)					
Interface	Ethernet	ports	1 (dedicated teaching pendant port) 10BASE-T / 1 (dedicated teaching teachin	ted teaching pendant port), 1 (for customer) 10BASE-T/100BASE-TX					
interiace	USB		1 (USB port of programmable controller CPU unit c	can be used.) / FD 1 (Ver. 2.0 device functions only, mini B terminal)					
	Additional-axis interface	channels	1 (SSC)	NET III)					
	Extension slot *1	slots	<b>FQ</b> — √	/ <b>FD</b> 2					
	Encoder input	channels	FQ Q173DPX (Sold	separately) / FD 2					
Ambient tempe	erature	°C	FQ 0 to 40 (drive unit)/0 to 55	(Robot CPU) / FD 0 to 40					
Relative humio	lity	%RH	45 to	o 85					
	Input voltage range *2	V	RV-2F/4F, RH-3FH/6FH: Sing RV-7, 7FLL/13F/20F, RH-12FH/20FH: Three-phase A						
Power supply	Power capacity *3	KVA	RV-2F, RH RV-4F, RH RH-12FH/I RV-7F RV-7FLU-13	L-6FH : 1.0 20FH : 1.5 : 2.0					
External dimer	nsions (including legs)	mm	430 (W) x 425 (D) x 174 (H)	430 (W) x 425 (D) x 98 (H)					
Weight		kg	Approx. 16	Approx. 12					
Structure [prot	ective specification]		Self-contained floor type/open structure (Vertical	al and horizontal position can be placed) [IP20]					
Grounding *4		0	100 or less (clas	ss D grounding)					


- $^{*}2$ : The rate of power-supply voltage fluctuation is within 10%.
- \*3: The power capacity indicates the rating for normal operation. Take note that the power capacity does not include the currentbeing input when the power is turned on. The power capacity is only a rough guide and whether or not operation can be guaranteed depends on the input power-supply voltage.
- \*4: Grounding works are the customer's responsibility.

  \*5: For CR751, crimp or solder wiring for connection to user wiring connectors for emergency stop input/output, door switch input, etc. and power supply connectors.

  The optional terminal block replacement tool available separately can also be used to connect wiring.

Processing speed

**Optimize** overload detection level

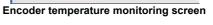

# Drive unit CR750-Q Drive unit CR751-Q Controller CR751-D Controller CR750-D

Note) The operating panel is not attached to the CR-751. Set up the robot operating 4- φ 18 30 environment to accommodate operation by a customer graphical optical terminal (GOT) or operating panel. Automatic and other operation modes can


be enabled from the teaching pendant.

#### Controller protection box (IP54)

#### Drive unit CR750-MB

The controller protection box is used to protect the controller from oil mist and other usage environments. (For CR750)

The front panel of the protection box has a mode switch and teaching box connector. It also contains a display window for viewing the controller operation panel.

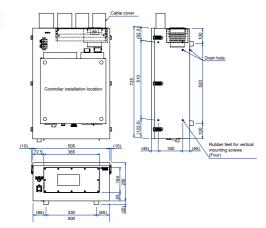

# **Multiple CPU environment**



Unit	Туре
Base	High-speed standard base between multiple CPU • Q35DB: 5 slots • Q38DB: 8 slots • Q312DB: 12 slots
Power supply	• Q61P • Q62P • Q63P • Q64PN
Programmable controller CPU	Universal model


### **Functions**

#### **Shortened takt times**

#### Improved control performance

Produced the fastest operating performance in its class using high-performance motors and unique driver control technology developed by Mitsubishi Electric.

- •Enabled high torque output at high rotational speed, shortening acceleration/deceleration time.
- Shortened positioning time for improved device throughput.
- Continuous operability improved
- Improved speed for the vertical movements that are so essential to horizontal multi-joint robot operation. 2400 mm/s, [RH-6FH: Twice as fast as the conventional speed]

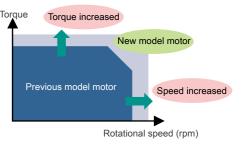

#### High-speed execution of programs

Enables execution up to 1.2 times faster than with the SQ/SD series. Numerical operation and conditional branch processing speeds increased by up to twice as fast, leading to shortened takt times.

#### Sample program

- 10 JOVRD 100 20 MOV P100 30 M1=M\_IN (10) 40 IF M1=1 THEN GOTO 1000
- 50 IF M1=2 THEN GOTO 2000 60 IF M1=3 THEN GOTO 3000
- 70 MOV P999 80 ERROR 9000
- 90 END
- 1000 PL=P1\*POFF\*PSHIFT 1010 PUP=PL 1020 PUP.Z=PUP.Z+MZ 1030 MOV PUP
- - - SQ/SD Series



Program processing time

Robot programs can be executed 1.2 times faster than before if compiled in advance and processed using an intermediate language. Takt times can be shortened by up to 3 times as much for longer lines. (Compared to previous models)

#### Optimal acceleration/deceleration control and optimal override control

- Optimal acceleration/deceleration times and speeds set automatically based on robot operating position, posture, and load conditions.
- Load conditions are set, enabling acceleration/deceleration times and speeds to be changed automatically according to whether a workpiece is present or
- This enables the maximum operating speed to be produced for each task
- Time needed to shorten cycle times reduced.

#### Improved continuous operability

Overload detection levels optimized based on the ambient temperature settings for the robot (set in the parameters). This helps improve continuous operability using load levels calculated based on actual environmental conditions for the robot axes.

The encoder temperature is monitored such that the machine is shut down due

to error if the temperature exceeds the tolerable limit.



#### Improved tooling performance

#### Compatuability with internal Ethernet cable tools

Internal installation of wiring and piping for connecting to vision sensors enabled.

- Hand: 8 input points/8 output points
- Ethernet cable for the vision sensor

· Attachment of the vision sensor to the wrist facilitates wiring.




#### Internal routing of hand wiring and wiring channels

Internal routing of cables and air hoses is enabled through the internal channels that lead up to the end of the robot arm.

Such internal routing increases the areas of the work envelope that the robot can reach without twisting and entangling cables and hoses.


This prevents interference with cables around devices and reduces the risk of wiring disconnection.

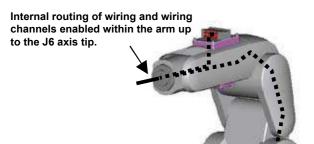

Note: Specify a model with Internal wiring (a model ending in '-SHxx').

The supported Internal wiring types may vary by model.

Note) The sections of wiring that can be routed internally may differ depending on the model.

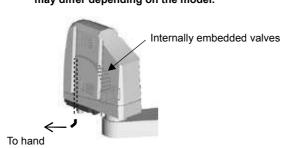


#### Full use of installation space

#### Expanded pivotal operating range

Improved flexibility for robot layout design considerations.

Enabling more effective use of access space around the entire perimeter including to the rear.


Shortened movement distances, enabling takt times to be shortened.

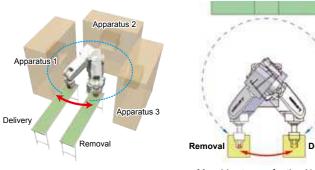

Movable stopper for the J1 axis

RV-2FQ/2FD pivot operation

Expanded J1 axis pivotal operating range to allow access to rear of machine

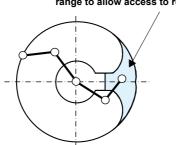

Rear access on RH-FQ/FD

#### Improved accuracy


#### Active gain control

- Optimal motor control tuning set automatically based on robot operating position, posture, and load conditions.
- Improves tracking accuracy for the target trajectory.
- Active gain control is a control method that allows the position gain to be changed in real time.
- This is effective for standard operations and tooling work requiring high accuracy.




#### Operating mode setting function

- Trajectory priority mode/speed priority operation can be set in programs to match customer system requirements.
- Optimal motor control tuning set automatically based on robot operating position, posture, and load conditions.
- Improves tracking accuracy for the target trajectory.
  - · This is effective for standard operations and tooling work requiring high accuracy.
  - Improved trajectory accuracyImproved vibration-damping performance

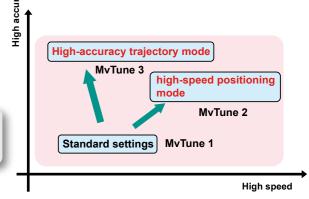

#### Deflection compensation function


- Compensates for deflection in the robot arm occurring due to gravity.
- Calculates the amount of compensation needed based on the operating position, posture, and load conditions of the robot and compensates for any deflection automatically.
- Compensates not only for static deflection due to gravitational pull but also for dynamic deflection due to the inertial force present during operation.
  - $\cdot$  Effective for work transporting workpieces to cassettes with low pitch and palletizing work.
    - Improved palletization accuracyImproved trajectory accuracy

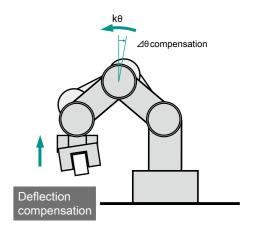


#### Simplified tool length setting

Tool settings for the tool coordinate system can be set by attaching the tool and using three to eight of the same teaching points.

Enables settings to be made for the actual tool including errors introduced when the tool was made and other data without needing to calculate values from the tool diagram.

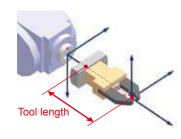

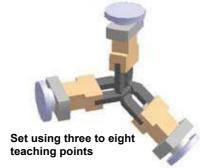


#### Adaptation to operation

#### Function for passing through the singular point

- The robot can be made to pass through the singular point, unlike with previous robot models. This allows for greater flexibility in the layout of robots and surrounding areas.
- Teaching operations can be performed more easily as there is no longer any need to cancel operations due to the presence of the singular point.

#### What a singular point is:


There is an unlimited number of angles at which the J4 and J6 axes can be set such that the angle of the J5 axis is 0° when linear interpolation operations are performed using position data from a joint coordinate system. This point is the singular point and is the point at which the robot cannot be operated at an assigned position and posture under normal conditions. The position at which this occurs is referred to as a singular point.

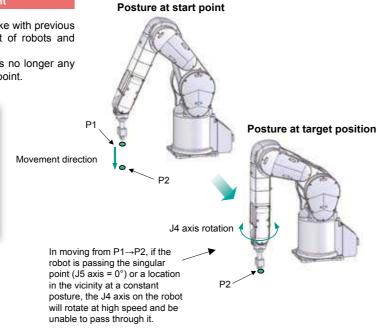

#### Orthogonal compliance control

- This function reduces the rigidity of the robot arm and tracks external forces.
   The robot itself is equipped with a compliance function, which makes special hands and sensors unnecessary.
- •This allows the amount of force generated through interference during chucking and workpiece insertion to be reduced and external movement copying forces to be controlled.
  - · The compliance direction can be set arbitrarily using the robot coordinate system, the tool coordinate system, etc.
  - · This is useful in protecting against workpiece interference and cutting down on stoppage.
  - Reduced tooling costs
  - Shortened line stop times
  - Shortened startup times

### Insertion direction or normal control direction

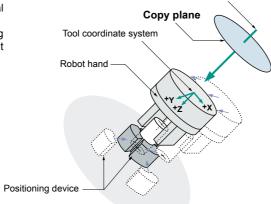

#### Improved user friendliness

#### Simple automatic operation from the teaching box

- Enables the robot to be controlled from the robot control screen using the same functions as on the operating panel of the robot controller.
- Monitoring screens can be set up individually to match the needs of user debugging conditions.
  - · Enabled for R32B/R33TB and R56TB/R57TB.




Robot control screen (R56TB)

Enables automatic operation of servo power on/off, startup, shutdown, reset, program selection, and other operations.


#### Enhanced RT ToolBox 2 visual functions

Enhanced RT ToolBox2 (PC software) graphic display function allowing setting parameters to be displayed visually. Visual confirmation using this function helps to proactively prevent setting errors.

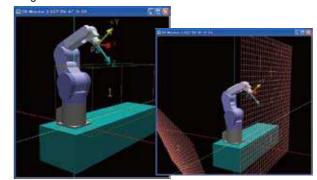


Display of user-defined regions/freedom-limited planes

Hands can be created as combinations of basic diagrams on the Hand Editing screen and then attached to the robot. Allows the relationships between the hand, workpiece, and peripheral devices to be checked with a single glance during simulation.

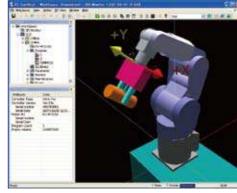


Attachment of a hand created in RT ToolBox2

Display of teaching positions and trajectories of end points helps to facilitate confirmation tasks during programming or simulations.

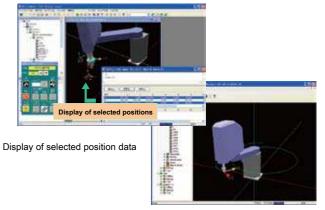

Display of trajectories

Standard 3D polygonal models can be imported into the program. Environmental models created using 3DCAD can be displayed on the screen, allowing operators to confirm the positional relationship between the robot and peripheral devices during simulation. (Applicable 3D data file formats: STL, OBJ)

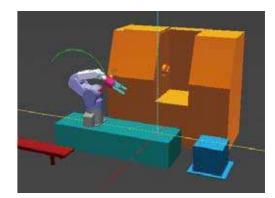

Example of a system environment screen from an imported model


20

(In-Sight 5400)

#### User-defined screen creation tools

Screens can be created anew, imported, or exported from "User-defined Screen Editing" in the project tree. Buttons, lamps, robot information, labels, and ruled lines can be arranged into layouts and assigned to robot variables.


Data created here is exported and loaded into the R56/57TB. Can be used as a user screen.

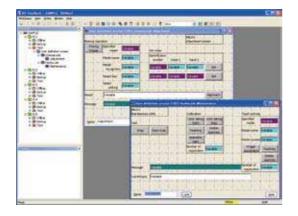

#### Linked to iQ Works

- Program management simplified Enables batch management of programs and data in blocks from the programmable controller to the servo, display device, and robot.
- Device model selection simplified
- All Mitsubishi device models are listed in the Navigator, enabling its use as a device model selection tool.

Ver. 1.24A and later is equipped with robot CPU selection capability and comes packaged with RT ToolBox2 (mini ver.).

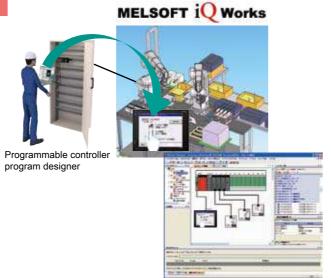

MELSOFT Navigator

#### **GOT** connection function


- The robot can be controlled directly from a Mitsubishi GOT 1000.
- Enables robot controller statuses to be uploaded and operations to be controlled directly from the GOT. Allows robot startup/shutdown, status/alarm monitoring, and other tasks to be completed from the GOT easily and guickly.
- Use of the transparent function enables editing of programs and parameters from the USB interface on the front GOT screen, improving user friendliness.



The personal computer and the GOT are connected with a USB cable or RS232 cable

[For Q type /D type controllers]

- Simplified control panel created using a GOT
- No need for ladder circuits with the GOT connection

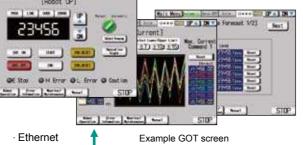

· Serial signals



[For Q type /D type controllers]

- \* You can download a sample image from the Mitsubishi
- (Sample data corresponds to the GT16, 640×480 or more)

#### Connection to peripheral devices

#### Vision sensor


- Simple settings
- The robot and camera can be calibrated through a simple process using vision sensor setting tools.
- Simple connection
- Simple connection between the robot and camera using Ethernet.
- Simple control
- Simple control using vision control commands in the robot programs.
- Three robots connected to a single vision sensor/Seven vision sensors connected to a single robot
- → Enables costs to be reduced even for complicated system configurations.
  - Shortened takt times
  - Reduced system costs



Three controllers

#### Tracking


- Transport, alignment, and installation work, etc. can be performed while robots are tracked with the workpiece on the conveyor without stopping the conveyor. Processing capability improved by up to 15% compared to that for SQ/SD series robots.
- Different variations can be selected, including vision tracking in combination with a vision sensor, tracking in combination with an opto-electric sensor, etc.
- Programs can be created easily in robot language (MELFA BASIC IV, V).
- Standard interface function. (D type only.) (Separate encoder and vision sensor required.)
  - No need for a positioning device
  - Improved operating takt
  - Reduced system costs

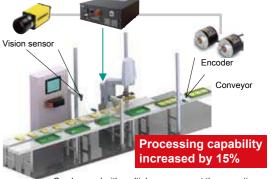

Can be used with multiple conveyors at the same time (Up to 8 max.).

#### Additional axis function

- The layout can be set up to include the robot traveling axis and turntable as well as user machines separate from the robot such as loaders and positioning devices.
- Up to 8 additional axes can be controlled by the controller.
- Additional axes and user machines can be operated from the robot program and teaching pendant without any additional motion control hardware. The same JOG operation as for the robot can be used. Robot language can be used for control operations.
- The robot controller has plug-and-play compatibility with the MELSERVO (MR-J4-B, MR-J3-BS) servos.
- Standard interface function (Separate servo amplifier and servo motor

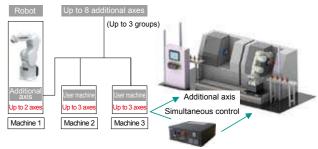

Compatible with MR-J4-B (J3-compatible mode)\*

\*Applicable software: Ver. R3g/S3g or later.

#### No need for a dedicated control device

#### User interfaces

The various network options available allow connection to a variety of devices used throughout the world.

Standard equipment: Ethernet

**SSCNET III** 

**Option:** CC-Link Profibus DeviceNet

Network base card (EtherNet/IP)

#### **Safety features**

#### Security features

Security features were added to protect programs and parameters. Read/write protection prevents parameters from being overwritten and programs from being changed inadvertently. Sensitive data can be protected using password

- Passwords can be set to protect created programs.
- The viewing and copying of data from the teaching pendant and RT ToolBox2 can be disabled.
- Writing operations for parameters can be disabled.

	Protected and restricted functions
Program-related	Reading and writing of programs Program deletion and copying Renaming and initialization of programs
Parameter-related	Writing of parameters
RT Tool Box2	Data backup and restore

#### Sustained tracking during emergency stop

The robot trajectory can be sustained even when the machine is shut down using an emergency stop. This allows interference with peripheral devices and other objects to be reduced or even fully prevented using the inertia of the robot arm to let it coast to a stop.

\* Use of this function does not guarantee that the trajectory will be sustained. The trajectory may be shifted out of line depending on the timing at which the emergency stop is activated.




#### **Collision detection function**

- This function detects if the arm collides with an obstacle while teaching or operating, and helps reduce damage to the robot arm and tools.
- The collision detection function can be used to protect the workpiece from becoming damaged due to interference between the workpiece and affected objects.
- The detection level can be changed according to the protection targets.
- The collision detection function can be programmed to generate an alarm or perform a specific escape move or both.

Ex.) An error is output due to the robot stopping suddenly, an error is output after escape movements are made, etc.

- Reduced tooling costs
- Shortened line stop times
- Reduced maintenance costs

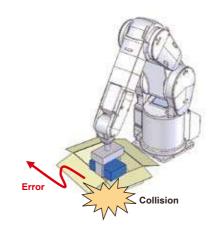

#### **Complies with safety standards**

Complies with the latest ISO-10218-1 (2011) standards for Robots and robotic devices - Safety requirements.

Meets the requirements for PL d of ISO13849-1 Category 3.

Safety circuits (emergency stop circuits) can easily be installed for the customer's entire system, not just for the robot itself.

There are robots with special specifications that comply with various safety standards. Contact a Mitsubishi Electric dealer or sales agent for further details if interested.

#### Applicable standards

- CE: European Conformity
- (European safety standards)
- Compliant with the EMC Directive, 2004/108/EC Compliant with the Machinery Directive, 2006/42/EC
- KCC: Korean Communications Commission

#### (Korean safety certification)

· Complies with the revised Korea Radio Act (Article 58 Section 2)


#### **Expanded J4 axis operating range**

• Expanding the J4 axis operating range enables the posture to be changed continuously during assembly and transport operations. It also eliminates the need for the robot to move in the opposite direction partway through an operation.



#### Compact installation with operation performed near the robot base

• Use of a flap-style arm contributes to a slimming of customer equipment, enabling operations to be completed in even closer proximity to the

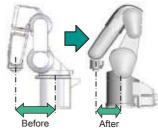


#### Changes in operating posture can be made even more quickly!!

• Changes in operating posture, which occur frequently during assembly, can be completed at rapid speed, increasing the speed of the axis close at hand as well as that of the base axis. Enables changes to be made to the operating posture at high speed.



#### **Enhanced wrist axis**

● Tolerable J4 axis inertia dramatically increased. Applies easily to multiple hands, offset hands, etc. [5 times that of previous models (RH-20FH)]

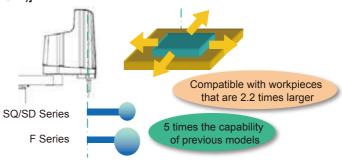

Enhanced wrist (RH-20FH)

#### **Features of IQ Platform Controllers**



Number of I/O points: 8192/8192

CC-Link (4 stations, 1×): 126/126

CC-Link (4 stations, 8x): 894/894

Remote I/O: 256/256

#### Improved responsivity through high-speed communications

Increases the speed of data communications between CPUs and dramatically reduces I/O processing times using a high-speed standard base between multiple CPUs.

#### **High-speed communications**





Measurement example: Transfer of 16-word data (With data matching check) CC-Link: 262ms

Between multiple CPUs: 63 ms (Approx. 4×)

#### Reduced wiring and number of units used

System costs can be reduced with the use of wireless systems and deletion of I/O units and network units.

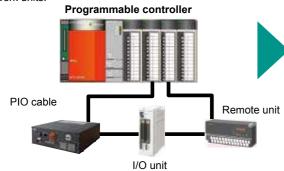

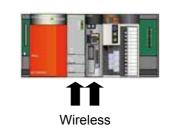

Shared memory

#### **Direct communication between CPU units**

Enables shared memory to be read from and written to between multiple robot CPUs

Speeds for data communications between robots increase, enabling more detailed control, such as with an interference prevention function or coordinated control, and cutting down on wasted time.



Direct communication between CPUs

No need for special programmable controller programs as shared memory is used.

#### Direct control between I/O units

Large amounts of data

The number of device points between the programmable controller

and robot was increased to 8192 input points and 8192 output

points. This allows the system to handle larger programs, more complicated control, and other objects that require a lot of I/O points.

Enables data to be read and written directly between the CPU unit

Responsivity improved and interlock times and cycle times shortened using high-speed I/O communications to peripheral devices.




Direct control between CPUs and I/O units

No need for programmable controller programs for signal input/output Improved responsivity without any delay due to scanning time

#### Batch management of multiple robots

Enables access to robots in the programmable controller network from a PC connected to the main CPU. Leads to a shortening of rise times and improved maintainability for robots on the production line.

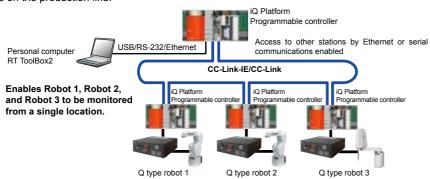

#### Shared memory expansion

Enhanced efficiency of monitoring and maintenance operations onsite using a single GOT (display device) as the Human Machine Interface (HMI).

Enables the robot to be controlled from the GOT even without a teaching box.

Current robot position data, error information, and other items can be displayed easily on the GOT.


#### Internal robot information

- Error, variable, and program information
- Robot status (Current speed, current position, etc.)
- Maintenance information (Remaining battery capacity, grease life. etc.)
- Servo data (Load factor, current values, etc.)



monitor screen



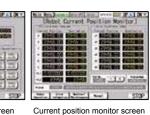

Organ Setting

Jog/hand operation screen Operation panel screen



Current value and load factor Maintenance forecast screen

Manual/video display menu

#### GOT connection (transparent function) (For GOT1000 Series)

Programs and parameters can be edited from the USB interface on the front of the GOT using a transparent function for improved operability.

> operations performed from the USB interface or the front of the GOT

Engineering environment

The personal computer and the GOT are connected with a USB cable or RS232 cable

#### GOT backup/restore functions (Supported on GT14, GT15 and GT16)

Robot data on the GOT can be backed up to and restored from a CF card or USB memory stick. With no need for a PC.

This helps prevent data from being lost due to the empty battery / battery or robot malfunction.

Data can be saved after periodic maintenance tasks are performed or when unexpected errors occur. Dramatically improves serviceability.








#### Direct execution function for programmable controllers

Robots can be controlled easily using programmable controller language. System operation can be controlled using a single programmable controller. This enables the operation of the programmable controller to handle making changes to system specifications and troubleshooting directly.

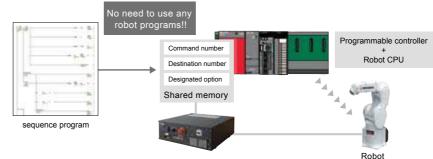

#### [Details of supported control operations1

•	
	Details
Operation	· Joint-interpolated motion · Linear-interpolated motion
Motion control	<ul> <li>Designated override</li> <li>Designated acceleration/ deceleration settings</li> <li>Designated speed</li> <li>Tool settings</li> <li>Designated auxiliary motion</li> <li>Opening/closing of hand</li> </ul>

26

#### **Collision Avoidance**




#### For automatic prevention of collisions between robots

The software constantly monitors robots motion, predicts collisions before they occur, and immediately stops the robots. This avoids damage to the robot during both the JOG operations and automatic mode operations. Also, this enables the number of interlocks needed to prevent collisions between robots to be reduced. (Alarm shutdown)



#### [Q type controllers only]

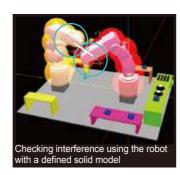

#### Decreases downtime during startup operation

Reduces the number of recovery man-hours required after collisions due to teaching operation errors or failure to set interlocks

#### Coordinated control



#### Coordinated control between multiple robots

Enables coordinated control between multiple robots through CPU connection between the robots. Easy to operate and use under normal operation through individual robot operation.

#### **Coordinated transport**

Enables transport of lengthy or heavy objects using multiple small-sized robots instead of larger ones.

#### [Q type controllers only]




Enables installation work to be completed while gripper positions between robots are maintained.

### **System Configuration**


### **FQseries**

System Configuration iQ Platform

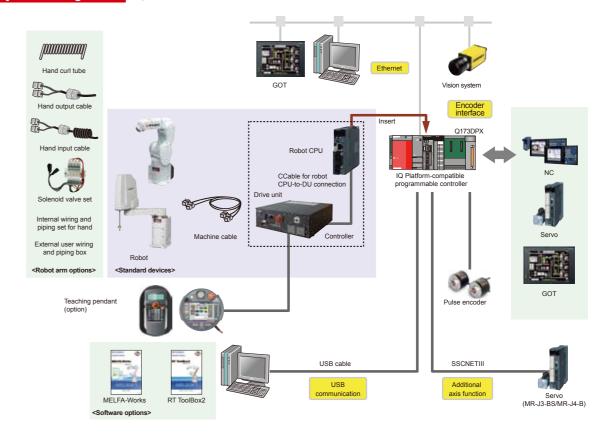

### **FDseries**

#### **System Configuration**

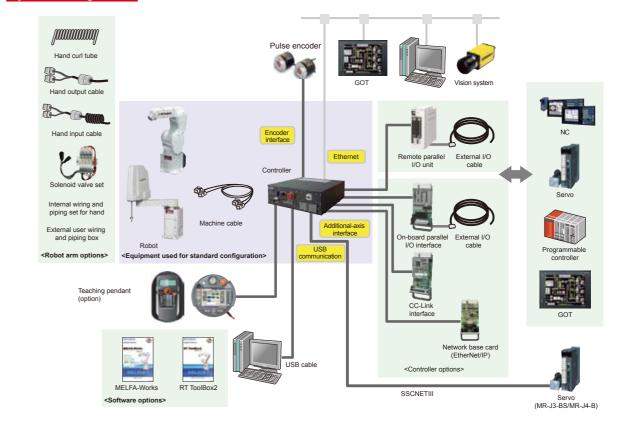

27

# **Configurations Options**

	rations options	For details, refer			RV				RH		
Classification	Name	Timo	125					КП	T	Functional specifications	
Siassification		Type	2F	4F 4FL	7F 7FL	7FLL		3FH	6FH	12FH 20FH	runctional specifications
		1E-VD0□ (Sink) 1E-VD0□E (Source)	0	-	-	-	-	-	-	-	1 to 2 valves, with solenoid valve output cable.  □ indicates the number of solenoid valves (1 or 2 valves) Output:
		1F-VD0□-02 (Sink) 1F-VD0□E-02 (Source)	-	0	0	0	-	-	-	-	1 to 4 valves, with solenoid valve output cable.  □ indicates the number of solenoid valves (1, 2, 3, or 4 valves) Output: $\phi$ 4
	Solenoid valve set	1F-VD0□-03 (Sink)	-	-	-	-	0	-	-	-	1 to 4 valves, with solenoid valve output cable.
		1F-VD0□E-03 (Source) 1F-VD0□-01 (Sink)	_	_	_	-	_	0	0	_	□ indicates the number of solenoid valves (1, 2, 3, or 4 valves) Output: φ6  1 to 4 valves, with solenoid valve output cable.
		1F-VD0□E-01 (Source) 1S-VD0□-01 (Sink)	_	_	_	-	_	_	_	0	indicates the number of solenoid valves (1, 2, 3, or 4 valves) Output: φ4      1 to 4 valves, with solenoid valve output cable.
		1S-VD0□E-01 (Source) 1E-GR35S	0	_		-	_			-	□ indicates the number of solenoid valves (1, 2, 3, or 4 valves) Output: φ6  Straight cable for 2-solenoid valve systems, total length of 300 mm, with a robot
	Hand output cable	1F-GR35S-02									connector on one side and unterminated on the other side  Straight cable for 4-solenoid valve systems, total length of 300 mm, with a robot
	Hand output cable		_	0	0	0	0	-	-	-	connector on one side and unterminated on the other side  Straight cable for 4-solenoid valve systems, total length of 1050 mm, with a robot connecto
		1F-GR60S-01	-	-	-	-	-	0	0	0	on one side and unterminated on the other side, equipped with a splash-proof grommet
		1S-HC30C-11	0	-	-	-	-	-	-	-	<ul> <li>4-point type, with a robot connector on one side and unterminated on the other side</li> <li>8-point type, total length of 1000 mm, with a robot connector on one side and unterminated</li> </ul>
	Hand input cable	1F-HC35S-02	_	0	0	0	0	-	-	-	on the other side  8-point type, total length of 1650 mm (includes a 350-mm-long curled section), with a robot
		1F-HC35C-01	-	-	-	-	-	0	0	-	connector on one side and unterminated on the other side, equipped with a splash-proof gromm 8-point type, total length of 1800 mm (includes a 350-mm-long curled section), with a robot
		1F-HC35C-02	-	-	-	-	-	-	-	0	connector on one side and unterminated on the other side, equipped with a splash-proof gromm
		1E-ST040□C	0	0	0	0	-	-	-	-	$\phi$ 4: 1 to 4 valves (L = 300 mm) $\square$ indicates the number of solenoid valves (2, 4, 6, 8). 2 or 4 valves for RV-2F.
	Hand (curl) tube	1E-ST0408C-300	-	-	-	-	-	0	0	<u> </u>	Compatibility with $\phi$ 4-4 solenoid valve systems (L = 300 mm)
	Esternal wising and 4	1N-ST060□C-01	-	-	-	-	0	-	-	0	$\phi$ 6: 1 to 4 valves (L = 600 mm) $\square$ indicates the number of solenoid valves (2, 4, 6, 8).
	External wiring set 1 for the forearm	1F-HB01S-01	-	0	0	0	0	-	-	-	Used for the forearm. External wiring box used for connecting the hand input cable, the Ethernet cable, and the electrical hand and force sensor cable.
	External wiring set 2 for the forearm	1F-HB02S-01	-	0	0	0	0	-	-	-	Used for the forearm. External wiring box used for connecting the force sensor, the electric hand, and the Ethernet cable.
	External wiring set 1 for the base	1F-HA01S-01	-	0	0	0	0	-	-	-	Used for the base. External wiring box used for connecting the communications output for the electrical hand, the electrical hand and force sensor cable, and the Ethernet cable. There are hand input connection available.
	External wiring set 2 for the base	1F-HA02S-01	-	0	0	0	0	-	-	-	Used for the base. External wiring box used for connecting the communications output for the electrical hand, the electrical hand, the force sensor cable, and the Ethernet cable. No hand input connection available.
	Internal wiring and piping set for hand	1F-HS604S-01	-	-	-	-	-	-	-	0	Wiring and piping set for internal mounting in the tip axis (Compatible with 8 input points for hand systems + $\phi$ 6-2 solenoid valve systems) For 350mm Z-axis stroke
		1F-HS604S-02	-	-	-	-	-	-	-	0	Wiring and piping set for internal mounting in the tip axis (Compatible with 8 input points for hand systems + $\phi$ 6-2 solenoid valve systems) For 450mm Z-axis stroke
		1F-HS408S-01	-	-	-	-	-	-	0	-	Wiring and piping set for internal mounting in the tip axis (Compatible with 8 input points for hand systems + $\phi$ 4-4 solenoid valve systems) For 200mm Z-axis stroke
Robot arm		1F-HS408S-02	-	-	-	-	-	-	0	-	Wiring and piping set for internal mounting in the tip axis (Compatible with 8 input points for hand systems + $\phi$ 4-4 solenoid valve systems) For 340mm Z-axis stroke
		1F-HS304S-01	_	-	-	-	-	0	-	-	Wiring and piping set for internal mounting in the tip axis (Compatible with 4 input points
	External user wiring and	1F-UT-BOX	_	-	-	-	-	0	0	-	for hand systems + φ 3-2solenoid valve systems)  Box for external wiring of user wiring (hand I/O, hand tube)
	piping box	1F-UT-BOX-01	-	-	-	-	-	-	-	0	Box for external wiring of user wiring (hand I/O, hand tube)
	Machine cable (replacement	1S-02UCBL-01	-	0	0	0	0	-	0	0	2-m-long cables for securement purposes (2-wire set with power supply and signal)
	for shorter 2-m type) (*1)	1F-02UCBL-01	-	-	-	-	-	0	-	-	2-m-long cables for securement purposes (2-wire set with power supply and signal)
		1S-□□CBL-11	0	-	-	-	-	-	-	-	Direct type, extended length 5m, 10m, 15m (2wires set with power and signal wires) □□ indicates the length of cables (5, 10, 15m)
	Machine cable, for extension/fixed	1S-□□CBL-01	-	0	0	0	0	-	0	0	Extention type, extended length 5m, 10m, 15m (2wires set with power and signal wires)  □ indicates the length of cables (5, 10, 15m)
	CR-750	1S-□□CBL-03	_	-	-	-	-	0	-	-	Extention type, extended length 5m, 10m, 15m (2wires set with power and signal wires)
	Machine cable,	1F-□□UCBL-11	0	-	-	-	-	-	-	-	□□ indicates the length of cables (5, 10, 15m)  Direct type, extended length 5m, 10m, 15m (2wires set with power and signal wires)
	for extension/fixed CR-751	1F-□□UCBL-02	_	0	0	0	0	0	0	0	□□ indicates the length of cables (5, 10, 15m)  Direct type, extended length 5m, 10m, 15m (2wires set with power and signal wires)
			0	_	-	-	-	_	-	-	□□ indicates the length of cables (10, 15, 20m)  Direct type, extended length 5m, 10m, 15m (2wires set with power and signal wires)
	Machine cable,	1S-□□LCBL-11									□□ indicates the length of cables (5, 10, 15m)  Extention type, extended length 5m, 10m, 15m (2wires set with power and signal wires)
	for extension/flexible CR-750	1S-□□LCBL-01	-	0	0	0	0	-	0	0	□□ indicates the length of cables (5, 10, 15m)  Extention type, extended length 5m, 10m, 15m (2wires set with power and signal wires)
		1S-□□LCBL-03	-	-	-	-	-	0	-	-	□□ indicates the length of cables (5, 10, 15m)
	Machine cable, for extension/flexible	1F-□□LUCBL-11	0	-	-	-	-	-	-	-	Direct type, extended length 5m, 10m, 15m (2wires set with power and signal wires) □□ indicates the length of cables (5, 10, 15m)
	CR-751	1F-□□LUCBL-02	-	0	0	0	0	0	0	0	Direct type, extended length 5m, 10m, 15m (2wires set with power and signal wires)  □□ indicates the length of cables (10, 15, 20m)
		1S-DH-11J1	-	-	-	-	-	0	-	-	Stopper for making changes, changed as needed for customer installations
		1F-DH-05J1	-			0	0		-	-	Stopper for making changes, changed as needed for customer installations (Compatible with the RV-7FLL.)
	Stopper for changing	1F-DH-04	-	-	0	-	-	-	-	-	Stopper for making changes, changed as needed for customer installations
	the J1-axis operating range	1F-DH-03	-	0	-	-	-	-	-	-	Stopper for making changes, changed as needed for customer installations
		1F-DH-02	-	-	-	-	-	-	-	0	Stopper for making changes, changed as needed for customer installations
	Observed	1S-DH-01	-	-	-	-	-	0	0	-	Stopper for making changes, changed as needed for customer installations
	Stopper for changing the J2-axis operating range	1S-DH-11J2	0	-	-	-	-	-	-	-	Stopper for making changes, changed as needed for customer installations
	Stopper for changing the J3-axis operating range	1S-DH-11J3	0	-	-	-	-	-	-	-	Stopper for making changes, changed as needed for customer installations

Note 1) This is a special specification for shipping. Inquire for delivery and prices.

Classification	Name	Type	CR	750	CR7	'51	Functional specifications
Classification	Name	туре	Q type	D type	Q type	D type	runctional specifications
	Standard teaching pendant (7m, 15m)	R32TB(-**)	0	0	-	-	7 m: Standard, 15 m: Custom ("-15" is included in the model name) For controller CR-750-*
	High-function teaching pendant (7 m, 15 m)	R56TB(-**)	0	0	-	-	7 m: Standard, 15 m: Custom ("-15" is included in the model name) For controller CR-750-*
	Standard teaching pendant (7m, 15m)	R33TB(-**)	-	-	0	0	7 m: Standard, 15 m: Custom ("-15" is included in the model name) For controller CR-751-*
	High-function teaching pendant (7 m, 15 m)	R57TB(-**)	-	-	0	0	7 m: Standard, 15 m: Custom ("-15" is included in the model name) For controller CR-751-*
	Conversion cable for the teaching box	2F32CON03M	-	-	0	0	Conversion cable used to connect the R32TB to the CR-751 controller. Cable length: 3 m.
	On-board Parallel I/O interface (Sink type) (Source type)	2A-RZ361 2A-RZ371	-	0	-	0	32 output points/ 32 input points
	Remote Parallel I/O cable (5m, 15m)	2A-CBL**	-	0	-	0	CBL05: 5 m, CBL15: 15 m, not terminated at one end. For 2A-RZ361/371.
	On-board Parallel I/O interface (Installed internally) (Sink type) (Source type)	2D-TZ368 2D-TZ378	-	0	-	0	32 output points/ 32 input points
Controller	Remote Parallel I/O cable (5m, 15m)	2D-CBL**	-	0	-	0	CBL05: 5 m, CBL15: 15 m, not terminated at one end. For 2D-TZ368/378.
	CC-Link interface	2D-TZ576	-	0	-	0	CC-Link Intelligent device station, Ver. 2.0, 1 to 4 stations
	Network base card	2D-TZ535	-	0	-	0	Communications interface for attaching to Anybus-CompactCom modules manufactured by HMS Accepts EtherNet/IP modules (*2)
	Force sensor set	4F-FS001-W200	0	0	0	0	Set of devices required for the force control function including a force sensor and interface unit
	Terminal block replacement tool for the user wiring	2F-CNUSR01M	-	-	0	0	Terminal block replacement tool for the wiring for the external input/output, such as emergency input/output, door switch input, and enabling device input
	AC power supply connection cable	2F-ACIN□P01M	-	-	0	0	Connection terminal for the AC power supply input connector. In $\square$ , 1 indicates the single phase and 3 indicates three phases.
	Controller protection box (*1)	CR750-MB	0	0	-	-	With a built-in CR750-D/Q for improved dust-proofing to IP54 (dedicated CR750)
	Personal computer support software	3D-11C-WINJ(E)	0	0	0	0	With simulation function (CD-ROM)
	Personal computer support software -mini	3D-12C-WINJ(E)	0	0	0	0	Simple version (CD-ROM)
	Simulator (MELFA-Works)	3F-21D-WINJ(E)	0	0	0	0	Layout study/Takt time study/Program debug. Add-in software for Solidworks® (*3)


<sup>\*1:</sup> For CR-750
\*2: Users need to provide the HMS EtherNet/IP module (AB6314-B) themselves.
\*3: SolidWorks® is a registered trademark of SolidWorks Corporation (USA).

### **Options**

#### RV-4F/RV-7F/13F/20F Series Tooling device configuration

		Dahat	Require	d device	
Hand configuration	Wiring format	Robot specifications	External wiring set for the forearm	External wiring set for the base (*3)	Comments
Air-hand +	Interior equipment	-SH01	— (*1)	_	Air hoses: Up to 2 systems (4 mm diameter x 4); 8 input signals
Hand input signal	Exterior equipment	Standard	— (*2)		Air hoses: Up to 4 systems (4 mm diameter x 8) are possible.
Air-hand + Hand input signal	Interior equipment	-SH05	— (*1)	(1F-HA01S-01)	Air hoses: Up to 1 systems (4 mm diameter x 2); 8 input signals
Vision sensor	Exterior equipment	Standard	1F-HB01S-01 (*2)	1F-HA01S-01	Air hoses: Up to 4 systems (4 mm diameter x 8) are possible.
Air-hand +     Hand input signal	Interior equipment	-SH04	— (*1)	(1F-HA01S-01)	Air hoses: Up to 1 systems (4 mm diameter x 2); 8 input signals
Hand input signal  Force sensor	Exterior equipment	Standard	1F-HB01S-01 (*2)	1F-HA01S-01	Air hoses: Up to 4 systems (4 mm diameter x 8) are possible.
Air-hand +     Hand input signal     Vision sensor	Interior equipment (Air hoses are part of exterior equipment)	-SH02	— (*1)	(1F-HA01S-01)	Air hoses are exterior equipment: 4 systems (4 mm diameter x 8)
<ul> <li>Force sensor</li> </ul>	End the connection	Standard	1F-HB01S-01	1F-HA01S-01	Air hoses: Up to 4 systems (4 mm diameter x 8) are possible.


- \*1: Users must provide the solenoid valves for Internal wiring model air-hands.
  \*2: Users must provide solenoid valves and hoses/input cables as needed for External wiring model air-hands.
  \*3: The external wiring set for the base is provided for models with Internal wiring and hoses.

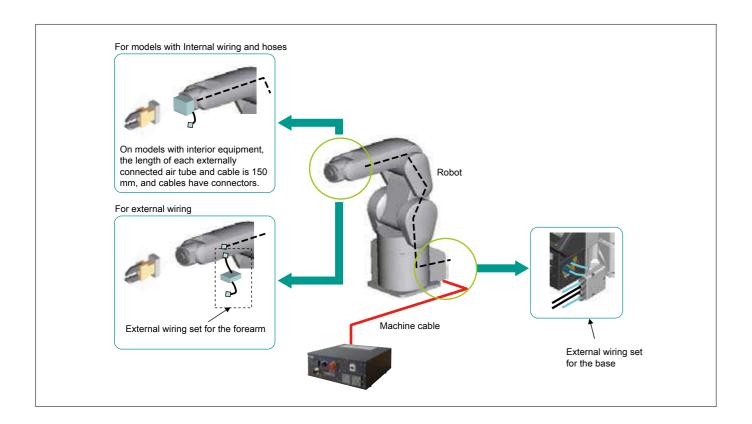


#### ► Models with Internal wiring and hoses

Devices supporting interior hoses	Model (special device number)							
Devices supporting interior rioses	-SH01	-SH02	-SH04	-SH05				
Air 4 mm diameter (×4/×2)	O (×4)	_	O (×2)	O (×2)				
Hand inputs (×8)	0	0	0	0				
Ethernet (Vision sensor)	_	0	_	0				
Force sensor	_	0	0	_				

#### RV series Tooling (air-hand): External wiring

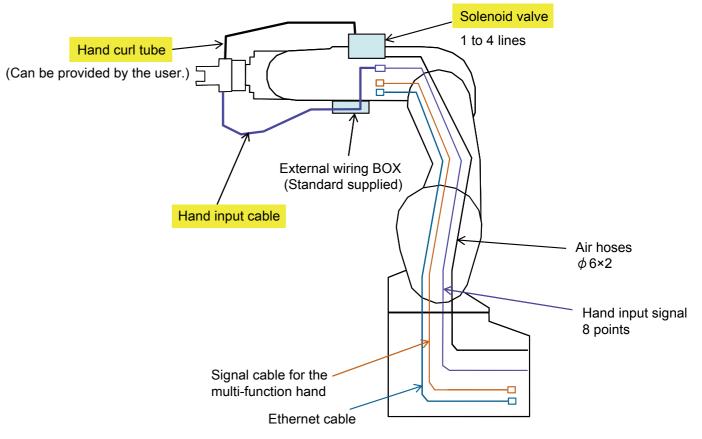

#### RV series Tooling (air-hand): Internal wiring

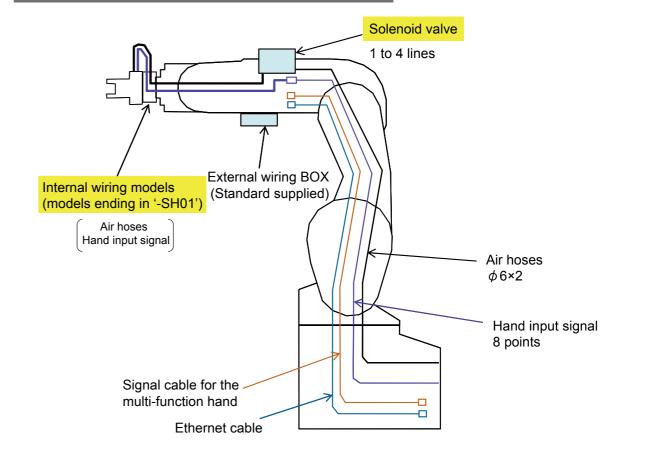

MELFA-Works is an add-in tool (\*1) for SolidWorks(\*2) used for robot simulation in production systems on PC's converting processing paths of workpieces into robot position data. Adding MELFA-Works into...on the robot simulation functions.

■ Example Screens for MELFA-Works

\*1) An add-in tool is a software program that adds certain functions to application software packages

\*2) SolidWorks® is a registered trademark of SolidWorks Corp, (USA).

#### - Features

The teaching position data and robot operation programs necessary for operating robots can be generated automatically by simple loading of 3D CAD data (\*3) for the applicable works into SolidWorks® and then setting of processing conditions and areas using MELFA-Works.

Automatic robot program creation function

\*3) Formats that can be loaded into SolidWorks®

- - DXFTM
    - VRMI
- SAT (ACISR) Pro/FNGINFFRR
- Machanical Desktor CADKEYR
- CGR (CATIARgraphics) Unigraphics
- Viewpoint RealityWave
- PAR (Solid Edge TM) IPT (Autodesk Inventor)

• IGES

 STEP ParasolidR

> • HOOPS • HCG (Highly compressed graphics)

VDA-FS

DWG

Note) Check the SolidWorks website and other published documents for the latest specifications

# RT-ToolBox2 (mini) A La La

#### List of functions

#### Part data created in Solidworks® can be loaded.

The positions of loaded parts can be rearranged relative to the CAD origin and other parts. Part positions can also be changed via numerical input.

Loading of part data from peripheral devices and rearrangement

Hands designed/created in SolidWorks® can be installed on robots. An ATC (Auto Tool

Simulations of hand signal control can be created using a robot program to handle workpieces.

Operation data needed to perform sealing and other operations requiring many teaching steps are easily created. All you need is to select the target area to be processed from 3D CAD data. Since operation data is created from 3D CAD source data, complex three-dimensional curves can be recreated with ease. This leads to significant reduction in teaching time

The robot posture can be set up on the screen in advance.

#### Creation of robot programs (template)

Workflow processes can be created using a combination of the offline teaching and CAD link functions and then converted into robot programs. (MELFA-BASIC IV, V format)

#### Assignment of robot programs

Robot programs can be used as is without any modifications. A different robot program can also be specified for each task slot.

#### Simulation of robot operations

Robot programs, including I/O signals, can be simulated. This means that movements of the actual system can be recreated directly and accurately. The following two methods are provided to simulate I/O signals of your robot controller.

(1) Create simple definitions of operations associated with I/O signals.

(2) Link I/O signals with GX Simulator.

#### Display of the robot movement path

Robot movement path can be displayed in the application / the workspace as.

Interference between the robot and peripheral devices can be checked. A target of interference check can be specified by a simple mouse click it on the screen. Information explaining the condition of interference that occurred (such as the contacted part, program line that was being executed when the interference occurred, and corresponding robot position) can be saved to a

#### Saving of video data

Simulated movements can be saved to video files (AVI format).

#### Measurement of cycle times

The cycle time of robot movement can be measured using an easy-to-use function resembling a stopwatch. It realizes the cycle time measurement of a specified part in a program

#### Robot program debugging functions

The following functions are provided to support the debug of robot programs Step operation: A specified program can be executed step by step.

Breakpoint : Breakpoints can be set in a specified program.
 Direct execution : Desired robot commands can be executed.

The robot shown in SolidWorks® can be jogged just like a real robot.

Traveling axis

A traveling axis can be installed to a robot to verify the operation of the system equipped with this.

#### Calibration

Point sequence data of CAD coordinates created by the CAD link function can be corrected to robot coordinate data.

Operation programs and point sequence data can also be transferred to robots To provide greater convenience for operators who perform calibration frequently on site, the calibration tool is provided as an application independent of MELFA-Works.

Accordingly, the calibration tool can be operated effectively on a notebook computer in which

SolidWorks® software is not installed

## RT ToolBox2

#### Software for program creation and total engineering support.

This PC software supports everything from system startup to debugging, simulation, maintenance and operation. This includes programming and editing, operational checking before robots are installed, measureing process tact time, debugging during robot startup, monitoring robot operation after startup, and trouble shooting.


- · Easy operation on Windows®.
- Compatible with Windows® 2000, Windows® XP, Windows® Vista, and Windows® 7 (32-bit Ver. 1.8 or later, 64-bit Ver. 2.0 or later).

- · This function is compatible with all models that connect to CRn-500 series and CRn-700 controllers.
- · Robots can be operated and tact time calculated using a personal computer (Not available for the mini version.)
- · Robot movements, operating status, input signals, and servo status can be

· The software has a maintenance function that notifies the operators greasing periods, battery life cycles as well as position recovery support function when trouble occurs, etc. and is effective for preventative maintenance, shortening


#### ■ Program editing and debugging functions

Creation of programs in MELFA-BASIC IV/V and the Movemaster languages. \*1 Improvement of work operations by a multi-window format and the various editing functions. This is helpful for use in checking operations such as the execution of program steps,

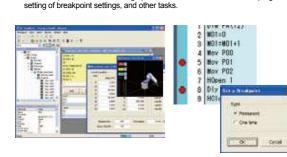

#### ■3D viewer

Graphical representation of a work along with the dimensions, color and other specified details of the work area to be gripped

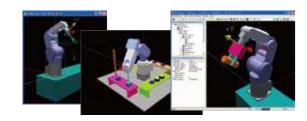

 $^{\star}1:$  MELFA-BASIC is a programming language that further expands upon and develops the commands needed for robot control. In MELFA-BASIC IV/V, the expansion of the command as well as parallel processing or structuring that were difficult to realize in BASIC language can make it possible to operate MELFA

#### <Example of a Pick & Place program> Mov Psafe Mov Pget,-50

Mvs Pget

Mvs Pput

Move the evasion point 'Move the workpiece extraction position up 'Move the workpiece

work are workpiece extraction position

Wait 0.2-sec. on standby

Close the hand

Wait 0.2-sec. on standby

Move the workpiece

extraction position up 'Wait 0.2-sec. on standby

Classification	Main functions
Operation- related	Joint, linear, and circular interpolation, optimal acceleration/ deceleration control, compliance control, collision detection, and singular point passage
Input/output	Bit/byte/word signals, interrupt control
Numerical operations	Numerical operations, pose (position), character strings, logic operations
Additional	Multi-tasking, tracking, and vision sensor functions

#### **■**Simulation functions


Offline robot motion and tact time check for designated parts of a program.

Support for all processes, from programming and startup to maintenance

· Programming can be completed using the MELFA-BASIC IV/V and


· Robot movement and operating status, input signals, and servo status can be

Movemaster languages (vary depending on the model)

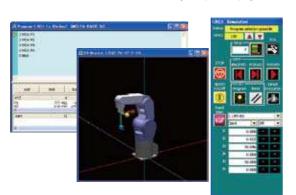

#### **■ Monitor functions**

This is used to monitor program execution status and variables, input signals, etc.

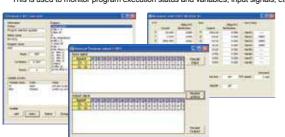

#### ■ Maintenance functions

These functions include maintenance forecast, position recovery support, parameter management, etc.

	64			AGE
mile.	4/1000		(A/V WWW	-A706A
	3547	0.800	Degrant	Chartest Street   417
	648	I DANS	Dogera	State of Schools
	1.0594		Date and 3	PRO SECURIOR I
			1997 No.	Smith State State Colonial
-	1-01750	Time:	(injurity mate)	his piper selecte food encount
wall	structor?	1446	Description	Section 100
One .	7824	1002	Service to	The same of the sa
196	divide.	1000	See Orner	THE RESERVE OF THE PARTY OF THE
Zini.	Marie 1	West !	Description in	
de sette	1.000	VMR.	Carried Scotts	
				F 60 1
			- 1	A Section 1 Section 1
				2 ST. 500 ST.
				The state of the s

### **Options**

### Force sensor set

Allows copy and fitting work to be completed in the same way a person would while the force applied to the hand is monitored.

Enables necessary work such as fine force adjustments and force detection to be completed.

#### Improved production stability

Enables parts to be inserted or attached without being damaged while absorbing shifts in position due to part variations and emulating the slight amounts of external force applied. Improved operating stability gained through position latches and retry processes when work operations fail. Log data can be used to manage quality control and analyze causes of work errors and other issues.

#### Simple control

Simple programs can be created using specialized robot language.

#### Allows assembly of more complicated configurations

Force detection during contact allows operating directions and applied force to be changed and interrupts to be executed under trigger conditions combining position and force information.

#### Simple operation


Work conditions can be checked and adjusted by viewing position and force data from the teaching box and graphs on RT ToolBox2.

#### **Product features**

	Item	Features
Force	Force control	Function for controlling robots while applying a specified force
sensor control	Stiffness control	Function for controlling the stiffness of robot appendages
	Gain changes	Function for changing control characteristics while the robot is running
Force	Execution of interrupts	Interrupts can be executed (MO triggers) under trigger conditions combining position and force information.
sensor	Data latch	Function for acquiring force sensor and robot positions while contact made
detection	Data reference	Function for display force sensor data and maintaining maximum values
Force	Synchronous data	Function for acquiring force sensor information synchronized to position infromation as log data and displaying it in graph form
sensor	Start/stop trigger	Allows logging start/stop commands to be specified in robot programs
log	FTP transmission	Function for transferring acquired log files to the FTP server

#### **Product Configuration**

Name	Qty.	
Force sensor	Qty. 1	
Force sensor interface unit	Qty. 1	
Sensor adapter	Qty. 1	
Adapter cable	Qty. 1	
24-V DC power supply	Qty. 1	
24-V DC power supply cable	1m	
Serial cable between the unit and sensor	5m	
SSCNET III	10m	

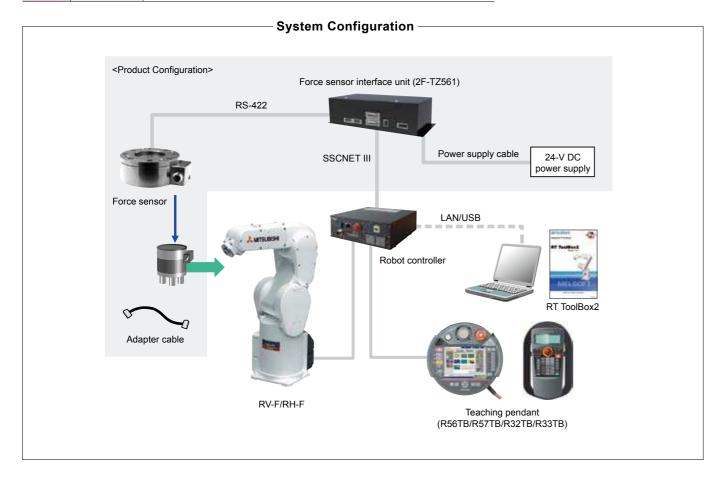

In-Sight (Manufactured by COGNEX: For Mitsubishi Electric FA devices)

The In-Sight software developed exclusively for use with Mitsubishi Electric FA devices with enhanced linking to In-Sight, the vision system produced by COGNEX Corporation, offers better compatibility with FA devices, allowing it to be utilized more easily as a more user-friendly vision system.

#### Simplified settings using Easy Builder

Easy Builder allows connection to vision systems, setting of job (vision programs) settings, and calibration between the robot and vision system to be completed easily and quickly.

#### Simplified connection using Ethernet

Up to three robots and seven vision systems can be connected together to the same system by Ethernet connection. Vision system information can be shared between multiple robots.

#### Simplified control using robot language

The included dedicated vision system commands enable vision system startup, job selection, and control of data receiving and other operations to be completed quickly and easily using a single command without any need for protocols.


#### Simplified job editing

Jobs (Vision recognition programs) are created from the job editing screen. Jobs can be edited using condition settings and other data, eliminating the need for specialized knowledge of vision control commands and other programming instructions.



#### Simplified calibration

The calibration wizard allows settings used in converting workpiece positions recognized by the vision system into robot coordinate system coordinates easily and quickly.

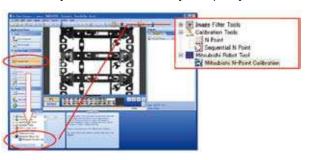

#### Robot controller specifications

Item	Specifications				
Software	Robot controller: CR750 Series CRnQ-700 Series: R1 ver. or later CRnD-700 Series: S1 ver. or later RT ToolBox2: Ver. 1.0 or later recommended				
Adapted robot controller	CR7xx/ CRnQ-7xx/ CRnD-7xx				
Connected robot	All models				
Number of robots connected to the vision system	Number of cameras used per robot controller: Up to 7 max. Number of robots that can be connected to a vision system: Up to 3 max.				
Robot program language	MELFA-BASIC V comes with dedicated vision sensor commands				

Model name -===			In-Sight Series					
		Entry	Standard		High resolution	Color		
		100	110	140	143	110C	140C	143C
Performance and magnification	Average performance data setting that for the standard version to 1 (*2)	1×	2×	5×	4×	2×	5×	4×
Camera	Resolution	640× 480	640× 480	640× 480	1600× 1200	640× 480	640× 480	1600× 1200
	CCD sensor size	1/3 in.	1/3 in.	1/3 in.	1/1.8 in.	1/3 in.	1/3 in.	1/1.8 in.
	Color	×	×	×	×	0	0	0

#### Simplified control using robot language

MELFA BASIC V comes with dedicated vision system control commands and status variables. These control commands and status variables enable the vision system to be controlled using simple programs.

Instruction word	Details	
NVOpen	Connect to the vision system and log on.	
NVPst	Start up the specified vision program and receive the transmitted results.	
NVRun	Start up the specified vision program.	
NVIn	Receive the transmitted results of the vision program specified by the NVRUN command.	
NVClose	End the connection to the vision system.	
NVLoad	Ready the specified vision program to enable it for startup.	
NVTrg	Transmit a request to the vision system for the image and acquire the encoder values after the specified length of time.	

Separate MELFA-Vision software is available for customers using In-Sight5000 series or In-Sight Micro series products. The use of job programs corresponding to work tasks performed regularly enables even customers who are new to vision systems to easily understand and use them without problems

MEMO	MEMO